SECTION 6
PARTS LIST

6.1 GENERAL

This section provides the parts lists for the **Resuscitaire® Radiant Warmer.** Part numbers of operator replacement parts, disposables, accessories and single use items are provided below:

6.2 RECOMMENDED SPARE PARTS

SPARE PARTS (QUANTITY OF 1)	PART NUMBER
Switch DPDT	17 683 11
Switch 3PST	17 683 18
Lamp (switch)	17 683 20
Caster	68 416 16
Roller Catch	81 100 63
Heater 120V Replacement Kit	81 990 50
Heater 240V Replacement Kit	81 990 51
Skin Probe	81 300 05
Power Supply	81 300 15
Fan Assembly	81 300 62
Display Board	X81 307 75T
Power/Control Board 120V	X81 308 70T
Power/Control Board 240V	X81 308 80T
Power/Control Board 220V	X81 308 83T
3-Way Valve	81 500 40

6.3 OPERATOR REPLACEABLE PARTS, DISPOSABLES AND ACCESSORIES

REPLACEABLE PARTS	PART NUMBER
Bassinet Side Panel Assy	81 900 00
Bassinet Rear Panel Assy	81 900 01
Bassinet Front Panel Assy	81 900 02
Power Cord 110V Units	17 AZ 104
Power Cord 220/240V Units	17 AZ 204
Replacement Blender	81 900 06

REPLACEABLE PARTS (cont.)	PART NUMBER
Heater Replacement Kit, 120 V	81 990 50
Heater Replacement Kit, 220–240 V	81 990 51
Replacement Side Panel, English	81 900 00
Replacement Rear Panel, English	81 900 01
Replacement Front Panel, English	81 900 02
Replacement Front Panel w/Bassinet Release, English	81 900 07
Replacement Side Panel, Spanish	81 900 10
Replacement Rear Panel, Spanish	81 900 11
Replacement Front Panel, Spanish	81 900 12
Replacement Front Panel w/Bassinet Release, Spanish	81 900 13
Replacement Side Panel, French	81 900 20
Replacement Rear Panel, French	81 900 21
Replacement Front Panel, French	81 900 22
Replacement Front Panel w/Bassinet Release, French	81 900 23
Replacement Side Panel, German	81 900 30
Replacement Rear Panel, German	81 900 31
Replacement Front Panel, German	81 900 32
Replacement Front Panel w/Bassinet Release, German	81 900 33
Replacement Side Panel, Italian	81 900 40
Replacement Rear Panel, Italian	81 900 41
Replacement Front Panel, Italian	81 900 42
Replacement Front Panel w/Bassinet Release, Italian	81 900 43
O_2/Air Sealing Washer	81 502 02
Micro Volume Suction Bottle Replacement Filters (Box of 10)	81 001 46

DISPOSABLES	PART NUMBER
Premi-Probe® 3 Skin Temperature Probe (Box of 10)	81 300 08
Premi-Probe® 3 Skin Temperature Probe (10 Boxes of 10)	81 300 09
Suction Filter	81 101 32
Breathing Circuit, Disposable	81 001 26
Manual/Automatic Breathing Circuit (Box of 25)	81 000 06
Critter Cover® Probe Covers (Box of 100)	68 209 46
Critter Cover® Probe Covers (Box of 600)	68 209 45
Neat Clips – 3/8" Diameter (Box of 100)	68 120 53
Neat Clips – 1.00" Diameter (50/Case)	68 120 54
Suction Bottle (Box of 100)	81 001 51
Breathing Circuit for Bagging, Disposable (Box of 25)	81 001 27
Suction Bottle (Box of 20)	81 001 49
Care For Me Covers	68 209 47
Care For Me Covers	68 209 48
Connector, w/Sideport, (Bag of 25)	81 001 29

Change 2

ACCESSORIES	PART NUMBER
Pass-Through Drawer Tray	81 101 11
Gas Cylinder Guard Assembly Kit	81 001 14
Air Hose Assembly, Yellow DISS (10 ft)	78 464 10
Air Hose Assembly, Black, DISS (10 ft)	81 501 50
Air Hose Assembly, Black, NIST (10 ft)	81 501 45
Oxygen Hose Assembly, Green, DISS (10 ft)	78 465 10
Oxygen Hose Assembly, White, DISS (10 ft)	68 507 30
Oxygen Hose Assembly, White, NIST (10 ft)	68 507 50
X-ray Tray	81 100 44
Breathing Circuit, for Bagging	81 001 26
Breathing Circuit, Reusable	81 000 15
Replacement Diaphragms (Box of 25)	81 000 07
Reusable Suction Bottle Kit	81 001 50
Replacement Filters & Tubing, Suction Bottle, (Box of 25)	81 001 54
Monitor Shelf Assembly	82 001 52
I.V. Pole Assembly	82 001 53
Instrument Tray Kit, Plastic RT	81 101 70R
Instrument Tray Kit, Plastic LF	81 101 70L
Reusable Dual Thermistor Skin Temperature Probe	81 300 05
Reusable Suction Bottle	08 131 00
Filter-to-Tubing (Box of 25)	81 001 54
Mattress/Cover (Mattress with Cover)	78 162 18
Reusable Manual/Automatic Breathing Circuit	81 000 15
Diaphragm/Tubing Kit (Box of 25)	81 000 07
Micro Volume Suction Bottle Kit	81 001 47

NOTES:
1. ITEMS IN ⬡ ARE CALLED OUT ON LABEL KIT 81 00X XX.
2. PLACE 10 REMAINING SCREWS IT.40, CABLE CLAMP IT.38 & SCREW IT.39 IN ZIPSEAL BAG IT.24. PLACE IN DRAWER WITH POWER CORD AND OTHER SPARE PARTS.

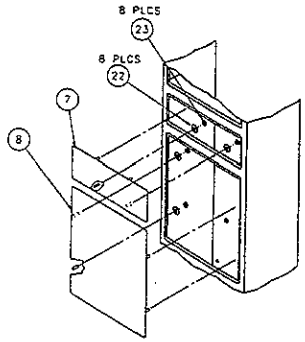

DETAIL OF BLANK PLATE INSTALLING

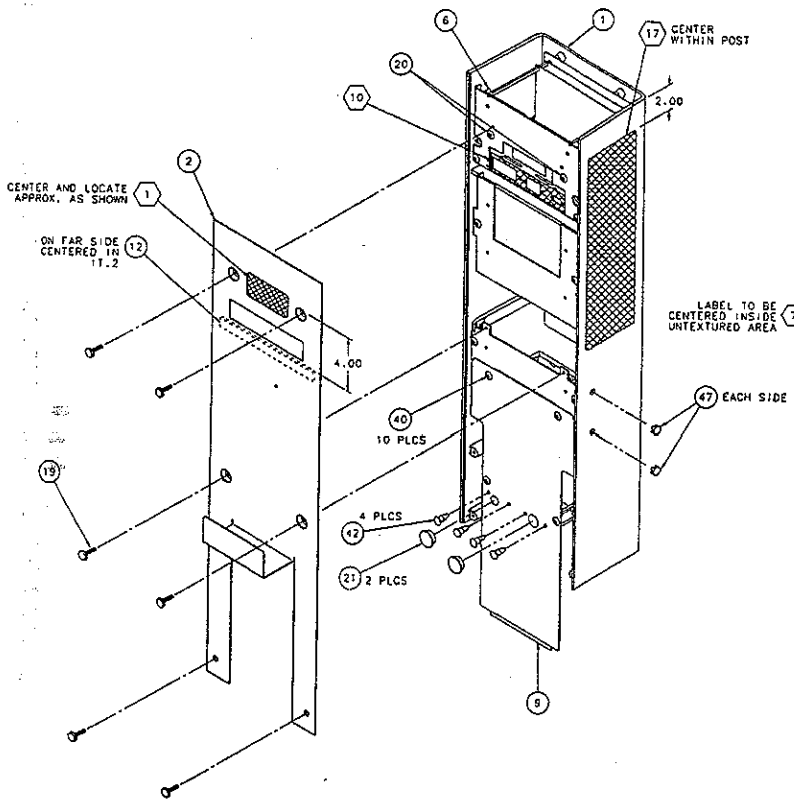

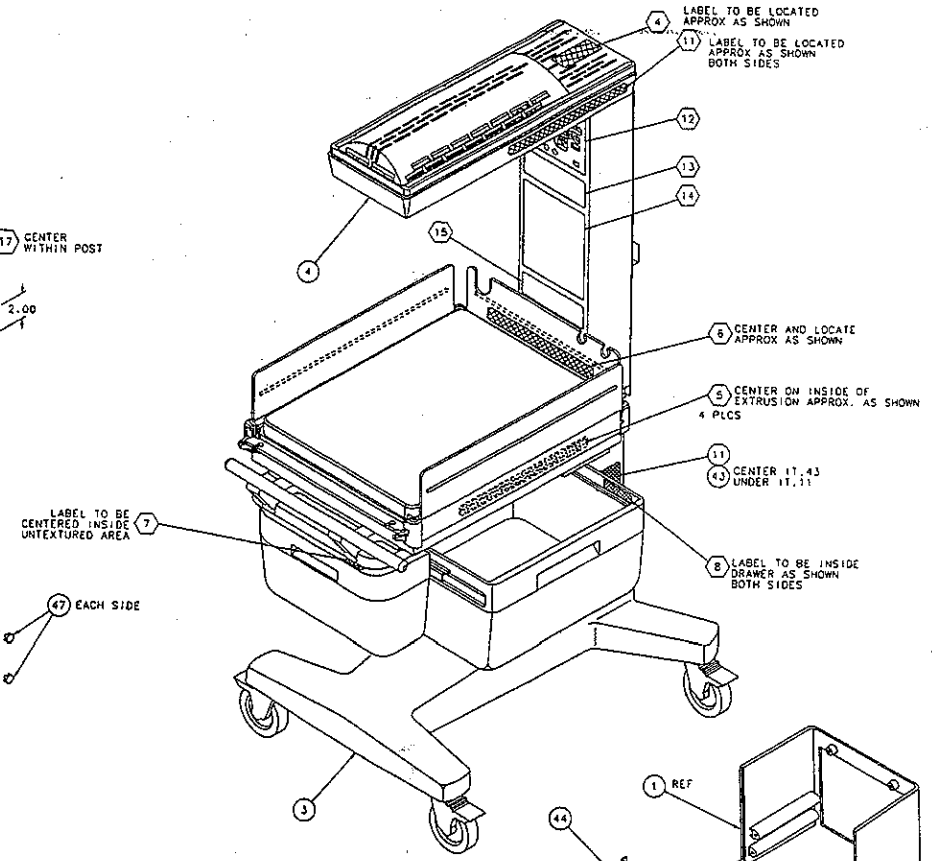
4 LABEL TO BE LOCATED APPROX AS SHOWN
11 LABEL TO BE LOCATED APPROX AS SHOWN BOTH SIDES
12
13
14
4
15
6 CENTER AND LOCATE APPROX AS SHOWN
5 CENTER ON INSIDE OF EXTRUSION APPROX. AS SHOWN 4 PLCS
11
43 CENTER IT.43 UNDER IT.11
LABEL TO BE CENTERED INSIDE UNTEXTURED AREA 7
8 LABEL TO BE INSIDE DRAWER AS SHOWN BOTH SIDES
3

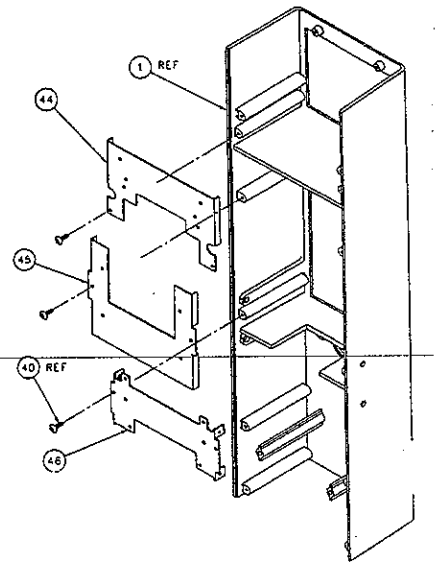

FIGURE 6.1A: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION (SHEET 1 OF 1)

TABLE 6.1A: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION PARTS LIST

(Sheet 1 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		POST, UPPER ◇	
		(Order label item 17. Refer to Figure 6.1.)	81 020 02
2		COVER, UPPER POST ◇	
		(Order label item 1. Refer to Figure 6.1.)	81 020 06
3	REFER TO TABLE 6.2	CART ASSEMBLY	81 020 73
4	REFER TO TABLE 6.4	WARMER HEAD ASSEMBLY, 120V	81 200 71
		WARMER HEAD ASSEMBLY, 220/240 V	81 200 81
5		NOT USED	
6	REFER TO TABLE 6.6	CONTROLLER ASSY, RW 120 V	81 300 70
		CONTROLLER ASSY, RW 220/240V	81 300 80
7		PLATE, BLANK, MICROBLENDER	81 005 71
8		PLATE, BLANK, RESUS MODULE	81 005 72
9		CHASSIS, GAS SUPPLY, W/O CYCL HOLES	81 500 00
10		CABLE ASSY, AC PWR/LK, DOM 10FT	17 AZ1 04
		CABLE ASSY, AC PWR/LK, EURO 10FT	17 AZ2 03
11		LABEL, DATA TAG, SYSTEM	81 000 37
12		GASKET, REAR COVER	81 020 32
13 THRU 18		NOT USED	
19		SCR, 10-32X3/4, PN PH W/WSHR WHT	99 042 93
20		SCR, 8-32X3/4, PH SS SEMS INT	99 032 94
21		PLUG BUTTON, NYLON, 0.62 HOLE	81 500 42
22		WASHER, SHLDR, .12ID 6.25OD	81 005 70
23		NUT, HEX, 4-40 KEPS S ZI	99 103 33
24 AND 25		NOT USED	

Change 3

TABLE 6.1A: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION PARTS LIST

(Sheet 2 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
26		PROBE, TEMP, SKIN, DUAL, REUSABLE	81 300 05
27 THRU 37		NOT USED	
38		CLAMP, CABLE, LOOP TY, NYL,.375ID	17 725 64
39		SCR, 8-32x3/8 TR PH SS	99 031 38
40		SCR, 10-32x3/8 TR PH SS NYLOK	99 041 36
41		NOT USED	
42		PLUG, PNL FSTNG, .182 - .192, CANOE	68 602 02
43		DECLARATION, CE, RW COST REDUCT	00 935 17
		LABEL, UL/CUL, CLASSIFIED	81 001 19
44		PLATE, HEAD SUPPORT	81 020 03
45		PLATE, BLENDER/RESUS SUPPORT	81 020 04
46		PLATE, RESUS/GAS SUPPLY SUPPORT	81 020 05
47		PLUG BUTTON, PLSTC, 0.38 HOLE	78 306 31

Change 2

TABLE 6.1A: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION PARTS LIST

(Sheet 3 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
1		LABEL, CAUT SHOCK HAZARD HI PRES, ENG	81 000 30
4		LABEL, CAUT SHOCK HAZARD, TOP COVER, ENG	81 200 50
5		LABEL, WARNING, SIDE/END PNL, ENG	78 162 56
6		LABEL, CAUTION, HEATING HAZARD, ENG	81 000 40
7		LABEL, LOAD LIMIT, 2 LBS, .91 KG	82 000 15
8		LABEL, LOAD LIMIT, 10 LBS, 4.5 KG	81 101 19
10		LABEL, REAR PANEL, 120 V, ENG	81 301 32
		LABEL, REAR PANEL, 220 V/240 V, ENG	81 301 35
11		LABEL, EXPLOSION HAZARD, ENG	78 265 41CC
12		OVERLAY, ELEC FR PANEL, RW ENG	81 300 25
13		OVERLAY, BLENDER BLANK, FR PANEL, RW	81 600 34
14		OVERLAY, FR PNL, BLANK	81 400 40
15		OVERLAY, GAS FR PNL, BLANK	81 501 24
17		LABEL, USER PRECAUTION, ENG	81 101 35
18		LABEL, DO NOT BLOCK VENTS	81 000 90

Change 2

NOTES:
1. ITEMS IN ◯ ARE CALLED OUT ON LABEL KIT 81 00x xx.
2. IF GAS SUPPLY HAS 2 INLETS, CENTER LABEL ABOVE BOTH. IF GAS SUPPLY HAS 1 INLET, CUT LABEL WHERE INDICATED & CENTER O2 PORTION OVER INLET.
3. PLACE 10 REMAINING SCREWS IT.40, CABLE CLAMP IT.38 & SCREW IT.39 IN ZIPSEAL BAG IT.24. PLACE IN DRAWER WITH POWER CORD AND OTHER SPARE PARTS.

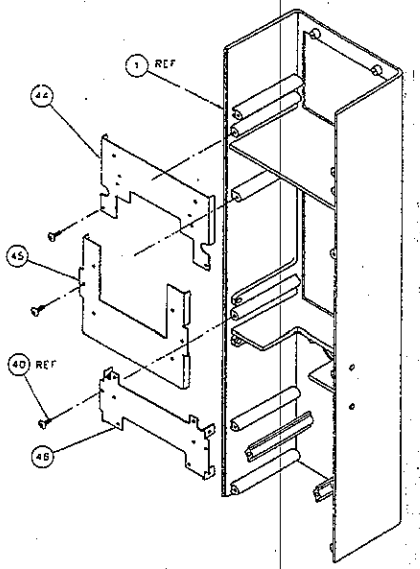

INSTALLATION OF BACK PLATES

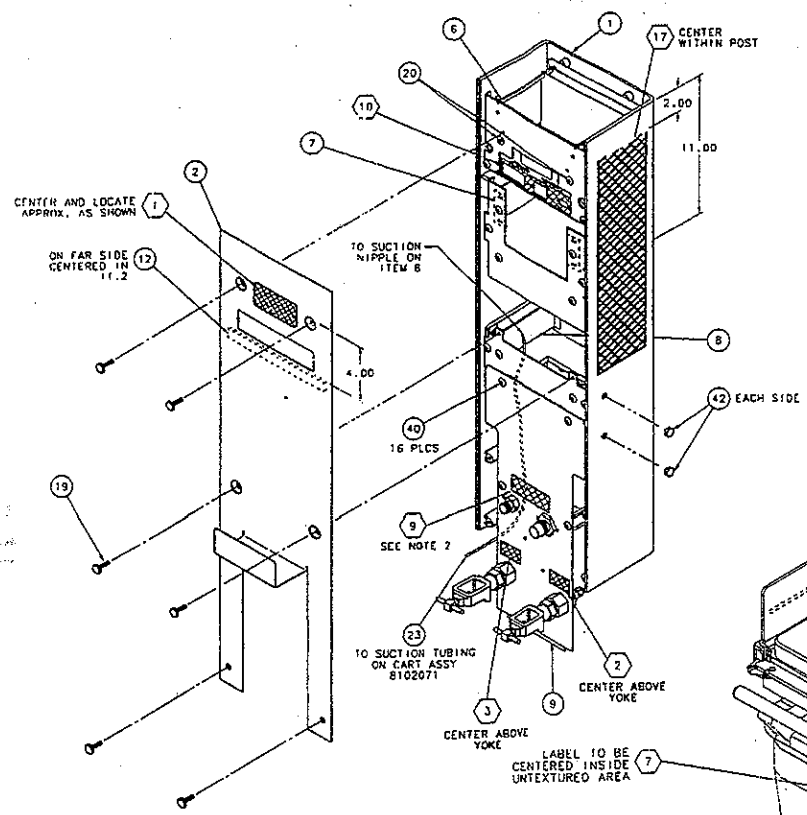

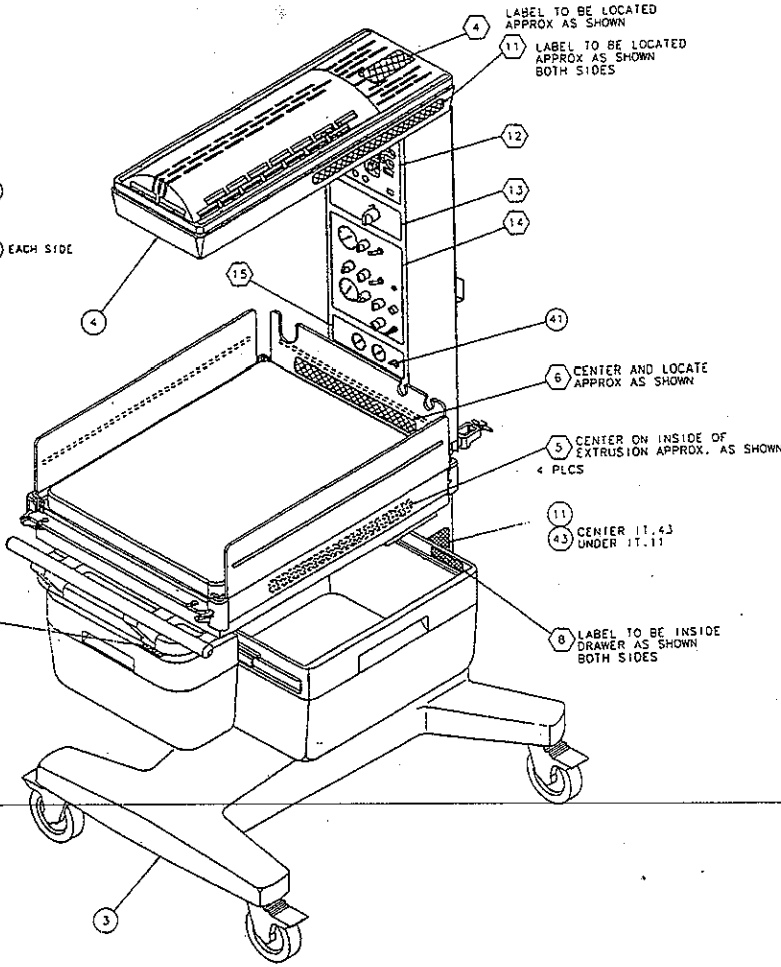
LABEL TO BE LOCATED APPROX AS SHOWN
LABEL TO BE LOCATED APPROX AS SHOWN BOTH SIDES
12
13
14
15
41
6 CENTER AND LOCATE APPROX AS SHOWN
5 CENTER ON INSIDE OF EXTRUSION APPROX. AS SHOWN 4 PLCS
11 43 CENTER IT.43 UNDER IT.11
8 LABEL TO BE INSIDE DRAWER AS SHOWN BOTH SIDES
4
3

FIGURE 6.1B: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER ASSEMBLY (SHEET 1 OF 1)

TABLE 6.1B: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 1 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		POST, UPPER ◇	
		(Order label items 16 and 17. Refer to Figure 6.1.)	81 020 02
2		COVER, UPPER POST ◇	
		(Order label item 1. Refer to Figure 6.1.)	81 020 06
3	REFER TO TABLE 6.2	CART ASSEMBLY	81 020 71
4	REFER TO TABLE 6.4	WARMER HEAD ASSEMBLY, 120 V	81 200 71
		WARMER HEAD ASSEMBLY, 220/240 V	81 200 81
		WARMER HEAD ASSEMBLY, 220 V	81 200 84
5		NOT USED	
6	REFER TO TABLE 6.6	CONTROLLER ASSY, RW 120 V	81 300 70
		CONTROLLER ASSY, RW 220/240 V	81 300 80
		CONTROLLER ASSY, RW 220 V	81 300 83
7	REFER TO TABLE 6.7	BLENDER BLANK ASSY	81 600 70
		BLENDER ASSY	81 600 80
8A	REFER TO TABLE 6.8	RESUS MODULE W/O AUTOBREATH (OLD)	81 400 72
		RESUS MODULE W/O AUTOBREATH (NEW)	81 400 73
8B	REFER TO TABLE 6.9	RESUS MODULE WITH AUTOBREATH, ENG (OLD)	81 400 80
		RESUS MODULE WITH AUTOBREATH, ENG (NEW)	81 400 81
9A	REFER TO TABLE 6.10	GAS SUPPLY, O_2 PIPELINE (DISS), WITH O_2 RESERVE (YOKE FITTINGS)	81 500 80
		GAS SUPPLY, O_2 PIPELINE (NIST), WITH O_2 RESERVE (YOKE FITTINGS)	81 500 81
9B	REFER TO TABLE 6.11	GAS SUPPLY, O_2 PIPELINE (WHT HOSE), WITH O_2 RESERVE (DIN FITTINGS)	81 500 83
9C	REFER TO TABLE 6.12	GAS SUPPLY, O_2/AIR PIPELINE (DISS), WITH O_2/AIR RESERVE (YOKE FITTINGS)	81 500 85
		GAS SUPPLY, O_2/AIR PIPELINE (NIST), WITH O_2/AIR RESERVE (YOKE FITTINGS)	81 500 86
9D	REFER TO TABLE 6.13	GAS SUPPLY, O_2/AIR PIPELINE (BLU/YEL HOSE), WITH O_2/AIR RESERVE (DIN FITTINGS)	81 500 88
		GAS SUPPLY, O_2/AIR PIPELINE (GRN/YEL HOSE), WITH RESERVE (DIN FITTINGS)	81 500 90
10		CABLE ASSY, AC PWR/LK, DOM 10 FT	17 AZ1 04
		CABLE ASSY, AC PWR/LK, EURO 10 FT	17 AZ2 03
11		LABEL, DATA TAG, SYSTEM	81 000 37
		LABEL, DATA TAG, CE MARK	81 001 02
		LABEL, DATA TAG, SYSTEM, EMC	81 001 34

Change 3

TABLE 6.1B: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 2 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
12		GASKET, REAR COVER	81 020 32
13 THRU 18		NOT USED	
19		SCR, 10-32X3/4, PN PH W/WSHR WHT	99 042 93
20		SCR, 8-32X3/4, TR PH SS	99 032 85
21		AIR HOSE WITH HANDTIGHT NUTS, 10 FT	78 464 10
		AIR HOSE, NIST & MA4, BLACK	81 501 45
		AIR HOSE, W/HAND NUTS, BLACK, 10 FT	81 501 50
22		HOSE, OXY, W/WING NUTS, WHITE, 10 FT	68 507 30
		HOSE, OXY, NIST & MK4, WHITE, 10 FT	68 507 50
		HOSE, OXY, W/WINGTYPE NUTS, 10 FT	78 465 10
23		TUBING, CLR PVC, 1/4 ID X 27.0 LG	08 136 07
24		NOT USED	
25		BREATHING CIRCUIT, DISPOSABLE	81 000 19
		BREATHING CIRCUIT, FOR BAGGING	81 001 26
26		PROBE, TEMP, SKIN, DUAL, REUSABLE	81 300 05
27		TANK BRACKET ASSY	81 001 14
28 THRU 37		NOT USED	
38		CLAMP, CABLE, LOOP TY, NYL,.25ID	17 062 26
		CLAMP, CABLE, LOOP TY, NYL,.375ID	17 725 64
39		SCR, 8-32x3/8 TR PH SS	99 031 38
40		SCR, 10-32x3/8 TR PH SS NYLOK	99 041 36
41		NUT, RD, BEV, 15-32-32 AL (BRITE)	99 112 96
42		PLUG BUTTON, PLSTC. 0.38 HOLE	78 306 31
43		DECLARATION, CE, RW COST REDUCT	00 935 17
		DECLARATION, EMC, RW COST REDUCT	00 935 18
		LABEL, UL/CUL, CLASSIFIED	81 001 19
44		PLATE, HEAD SUPPORT	81 020 03
45		PLATE, BLENDER/RESUS SUPPORT	81 020 04
46		PLATE, RESUS/GAS SUPPLY SUPPORT	81 020 05

TABLE 6.1B: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 3 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
1		LABEL, CAUT SHOCK HAZARD HI PRES, ENG	81 000 30
		LABEL, CAUT SHOCK HAZARD HI PRES, SPN	81 000 31
		LABEL, CAUT SHOCK HAZARD HI PRES, FRN	81 000 32
		LABEL, CAUT SHOCK HAZARD HI PRES, GER	81 000 33
		LABEL, CAUT SHOCK HAZARD HI PRES, ITL	81 000 34
2		LABEL, AIR CYLINDER INLET, ENG	81 400 10
		LABEL, AIR CYLINDER INLET, SPN	81 400 11
		LABEL, AIR CYLINDER INLET, FRN	81 400 12
		LABEL, AIR CYLINDER INLET, GER	81 400 13
		LABEL, AIR CYLINDER INLET, ITL	81 400 14
		LABEL, OXY CYLINDER INLET, ENG	81 400 17
		LABEL, OXY CYLINDER INLET, SPN	81 400 18
		LABEL, OXY CYLINDER INLET, FRN	81 400 19
		LABEL, OXY CYLINDER INLET, ITL	81 400 35
3		LABEL, OXY CYLINDER INLET, ENG	81 400 17
		LABEL, OXY CYLINDER INLET, SPN	81 400 18
		LABEL, OXY CYLINDER INLET, FRN	81 400 19
		LABEL, OXY CYLINDER INLET, ITL	81 400 35
		LABEL, OXY CYLINDER INLET, GER	81 400 36
4		LABEL, CAUT SHOCK HAZARD, TOP COVER, ENG	81 200 50
		LABEL, CAUT SHOCK HAZARD, TOP COVER, SPN	81 200 51
		LABEL, CAUT SHOCK HAZARD, TOP COVER, FRN	81 200 52
		LABEL, CAUT SHOCK HAZARD, TOP COVER, GER	81 200 53
		LABEL, CAUT SHOCK HAZARD, TOP COVER, ITL	81 200 54
5		LABEL, WARNING, SIDE/END PNL, ENG	78 162 56
		LABEL, WARNING, SIDE/END PNL, SPN	78 162 57
		LABEL, WARNING, SIDE/END PNL, FRN	78 162 58
		LABEL, WARNING, SIDE/END PNL, GER	78 162 59
		LABEL, WARNING, SIDE/END PNL, ITL	78 162 63
6		LABEL, CAUTION, HEATING HAZARD, ENG	81 000 40
		LABEL, CAUTION, HEATING HAZARD, SPN	81 000 41
		LABEL, CAUTION, HEATING HAZARD, FRN	81 000 42
		LABEL, CAUTION, HEATING HAZARD, GER	81 000 43
		LABEL, CAUTION, HEATING HAZARD, FRN	81 000 44
7		LABEL, LOAD LIMIT, 2 LBS, .91 KG	82 000 15

TABLE 6.1B: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 4 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
8		LABEL, LOAD LIMIT, 10 LBS, 4.5 KG	81 101 19
9		LABEL, PIPELINE INL WATER TRAP, ENG	81 500 91
		LABEL, PIPELINE INL WATER TRAP, SPN	81 500 92
		LABEL, PIPELINE INL WATER TRAP, FRN	81 500 93
		LABEL, PIPELINE INL WATER TRAP, GER	81 500 94
		LABEL, PIPELINE INL WATER TRAP, ITL	81 500 95
10		LABEL, REAR PANEL, 120 V, ENG	81 301 32
		LABEL, REAR PANEL, 120 V SPN	81 301 33
		LABEL, REAR PANEL, 120 V FRN	81 301 34
		LABEL, REAR PANEL, 220 V/240 V, ENG	81 301 35
		LABEL, REAR PANEL, 220 V/240 V, SPN	81 301 36
		LABEL, REAR PANEL, 220 V/240 V, FRN	81 301 37
		LABEL, REAR PANEL, 220 V, GER	81 301 38
		LABEL, REAR PANEL, 220 V/240 V, ITL	81 301 39
11		LABEL, EXPLOSION HAZARD, ENG	78 265 41CC
		LABEL, EXPLOSION HAZARD, SPN	78 265 42CC
		LABEL, EXPLOSION HAZARD, ITL	78 265 43CC
		LABEL, EXPLOSION HAZARD, GER	78 265 44CC
12		OVERLAY, ELEC FR PANEL, RW ENG	81 300 25
		OVERLAY, ELEC FR PANEL, RW SPN	81 300 26
		OVERLAY, ELEC FR PANEL, RW FRN	81 300 27
		OVERLAY, ELEC FR PANEL, RW GER	81 300 28
		OVERLAY, ELEC FR PANEL, RW ITL	81 300 29
13		OVERLAY, BLENDER FR PANEL, RW ENG	81 600 27
		OVERLAY, BLENDER FR PANEL, RW SPN	81 600 28
		OVERLAY, BLENDER FR PANEL, RW FRN	81 600 29
		OVERLAY, BLENDER FR PANEL, RW GER	81 600 30
		OVERLAY, BLENDER FR PANEL, RW ITL	81 600 31
		OVERLAY, BLENDER BLANK, FR PANEL, RW	81 600 34
14		OVERLAY, AUTO FR PNL, RW ENG	81 400 20
		OVERLAY, AUTO FR PNL, RW SPN	81 400 21
		OVERLAY, AUTO FR PNL, RW FRN	81 400 22
		OVERLAY, AUTO FR PNL, RW GER	81 400 23
		OVERLAY, AUTO FR PNL, RW ITL	81 400 24
		OVERLAY, W/O AUTO FR PNL, RW ENG	81 400 27
		OVERLAY, W/O AUTO FR PNL, RW SPN	81 400 28
		OVERLAY, W/O AUTO FR PNL, RW FRN	81 400 29
		OVERLAY, W/O AUTO FR PNL, RW GER	81 400 30
		OVERLAY, W/O AUTO FR PNL, RW ITL	81 400 31
		OVERLAY, FR PNL, BLANK	81 400 40

TABLE 6.1B: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 5 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST- ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
15		OVERLAY, O_2 GAS FR PNL, RW E	81 500 50
		OVERLAY, O_2 GAS FR PNL, RW FR	81 500 52
		OVERLAY, O_2/AIR GAS FR PNL, RW E	81 500 60
		OVERLAY, O_2/AIR GAS FR PNL, RW S	81 500 61
		OVERLAY, O_2/AIR GAS FR PNL, RW F	81 500 62
		OVERLAY, O_2/AIR GAS FR PNL, RW G	81 500 63
		OVERLAY, O_2/AIR GAS FR PNL, RW I	81 500 64
17		LABEL, USER PRECAUTION, ENG	81 101 35
		LABEL, USER PRECAUTION, SPN	81 101 36
		LABEL, USER PRECAUTION, FRN	81 101 37
		LABEL, USER PRECAUTION, GER	81 101 38
		LABEL, USER PRECAUTION, ITL	81 101 39
18		LABEL, DO NOT BLOCK VENTS	81 000 90

Change 2

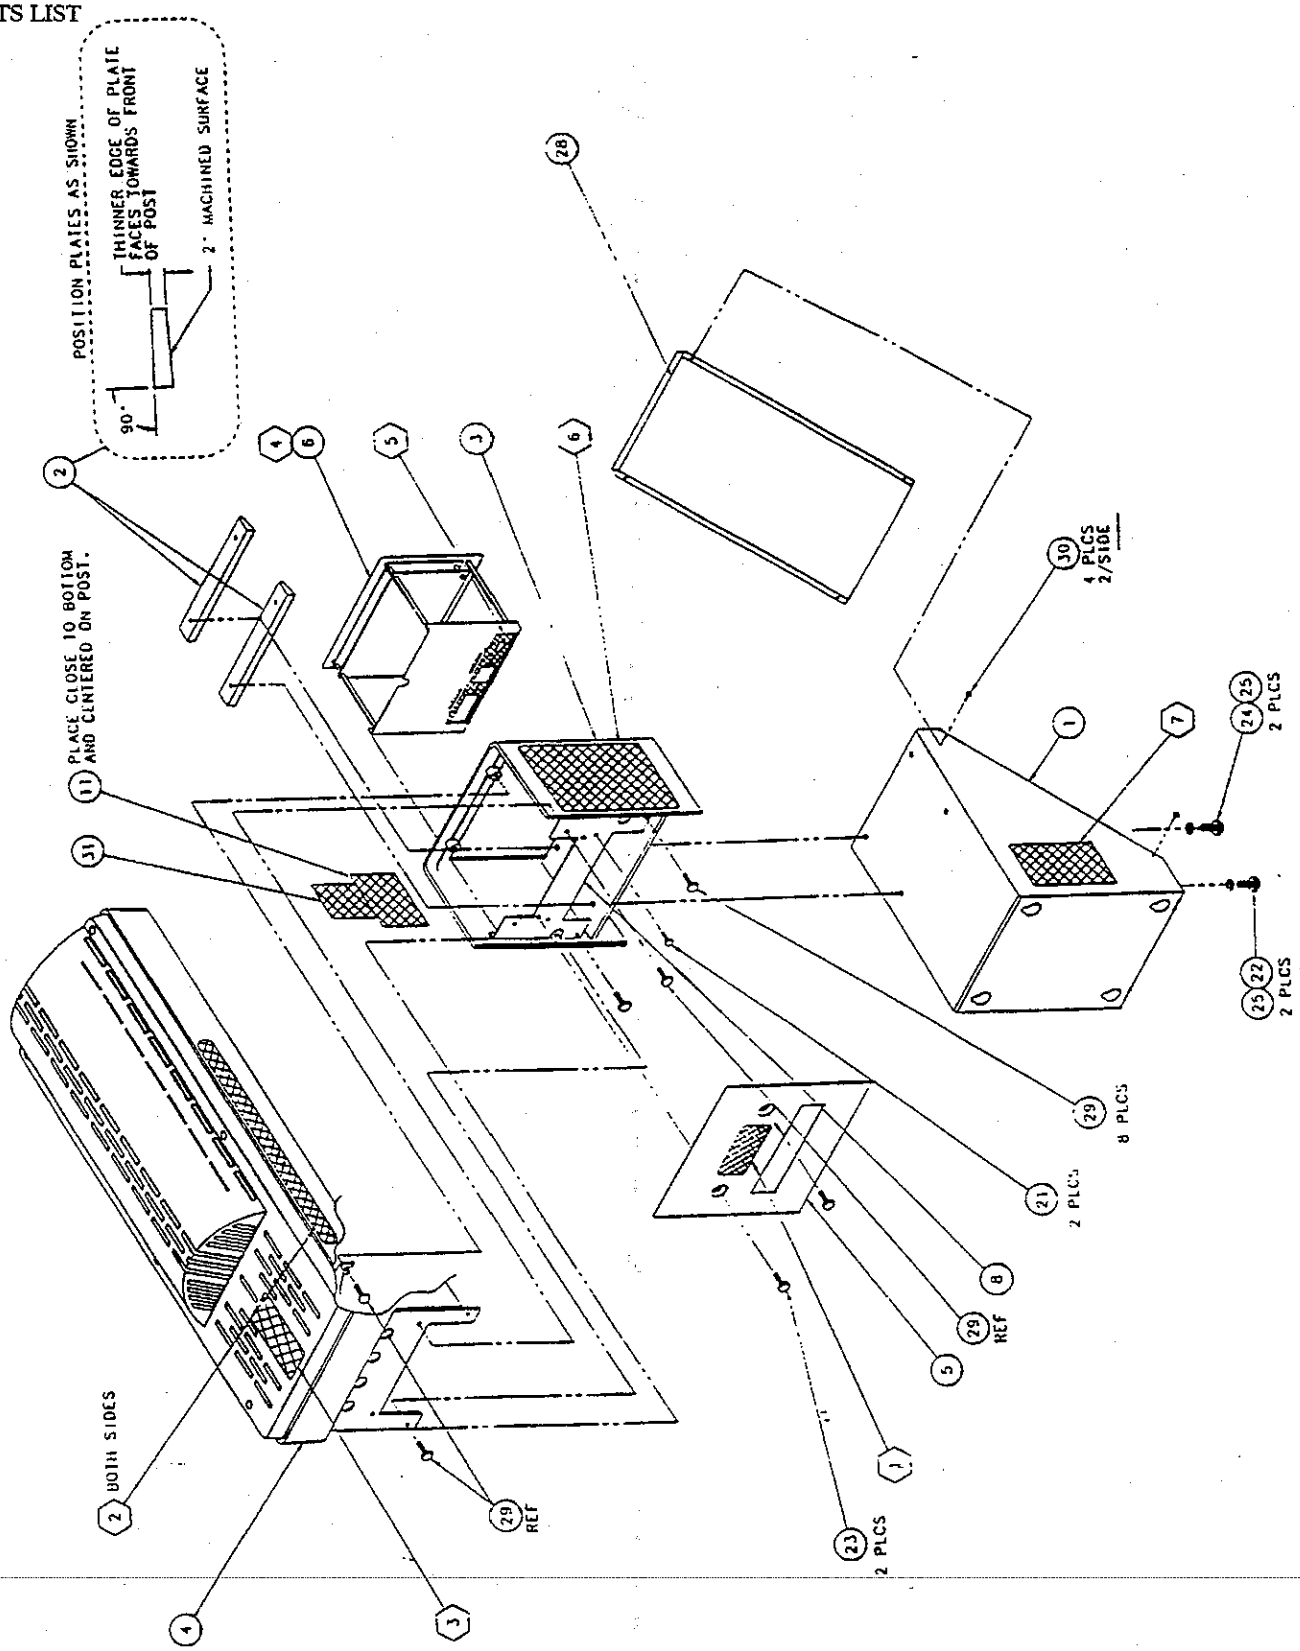

FIGURE 6.1C PARTS LOCATION DIAGRAM, WALL MOUNTED RESUSCITAIRE® RADIANT WARMER

Change 1

TABLE 6.1C: WALL MOUNTED RESUSCITAIRE® RADIANT WARMER, ASSEMBLY, PARTS LIST

(Sheet 1 of 1)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		WALL MOUNTED RESUSCITAIRE® 120V ENG	82 000 70
		WALL MOUNTED RESUSCITAIRE® 220/240V ENG	82 000 80
1		WALL MOUNT BRACKET	82 000 11
2		WALL MOUNT PLATE	82 ,000 12
3		POST	82 000 13
4		WARMER HEAD ASSY 120V	81 200 71
		WARMER HEAD ASSY 220/240V	81 200 81
5		UPPER POST COVER	82 000 14
6		CONTROLLER ASSY 120V	81 300 70
		CONTROLLER ASSY 220/240V	81 300 80
7		NOT USED	
8		HEAD SUPPORT PLATE	81 200 03
9 THRU19		NOT USED	
20		POWER CORD 120V	17 AZ 104
		POWER CORD 220/240V	17 AZ 204
21		SCREW, 8 - 32 X 3/4 PH SS SEMS INT	99 032 94
22		SCREW, 1/4 - 20 X 3/4 CP HX SS	99 056 96
23		SCREW, 10 - 32 X 3/4 PN PH/WSHR WHT	99 042 93
24		SCREW, 1/4 - 20 X 7/8 CP HX SS	99 057 34
25		LOCK WASHER, SP 1/4 SS	99 125 53
26		FLAT WASHER, 1/8 ID 0.75 OD 0.065T SS	99 126 71
27		REUSABLE SKIN PROBE	81 300 05
28		WALL MOUNT COVER PLATE	82 000 18
29		SCEW, 10 - 32 X 3/8 TR PH SS NYLOK	99 041 36
30		SCREW, 6 - 32 X 1/4 PN PH SS SEMS EX	99 022 83
31		UL/CUL LABEL	81 001 19
		LABELS	
		CAUTION HAZ/JI PRESS, ENG	81 000 30
		EXPLOSION HAZARD, ENG	78 265 41CC
		CAUTION SHOCK HAZ, ENG	81 200 50
		FRONT PANEL OVERLAY	81 300 35
		REAR PANEL LABEL 120V, ENG	81 301 32
		REAR PANEL LABEL 220V-240V ENG	81 301 35
		USER PRECAUTION	82 000 17
		MATTRESS HEIGHT	82 000 16
		DO NOT BLACK VENTS	81 000 90

Change 2

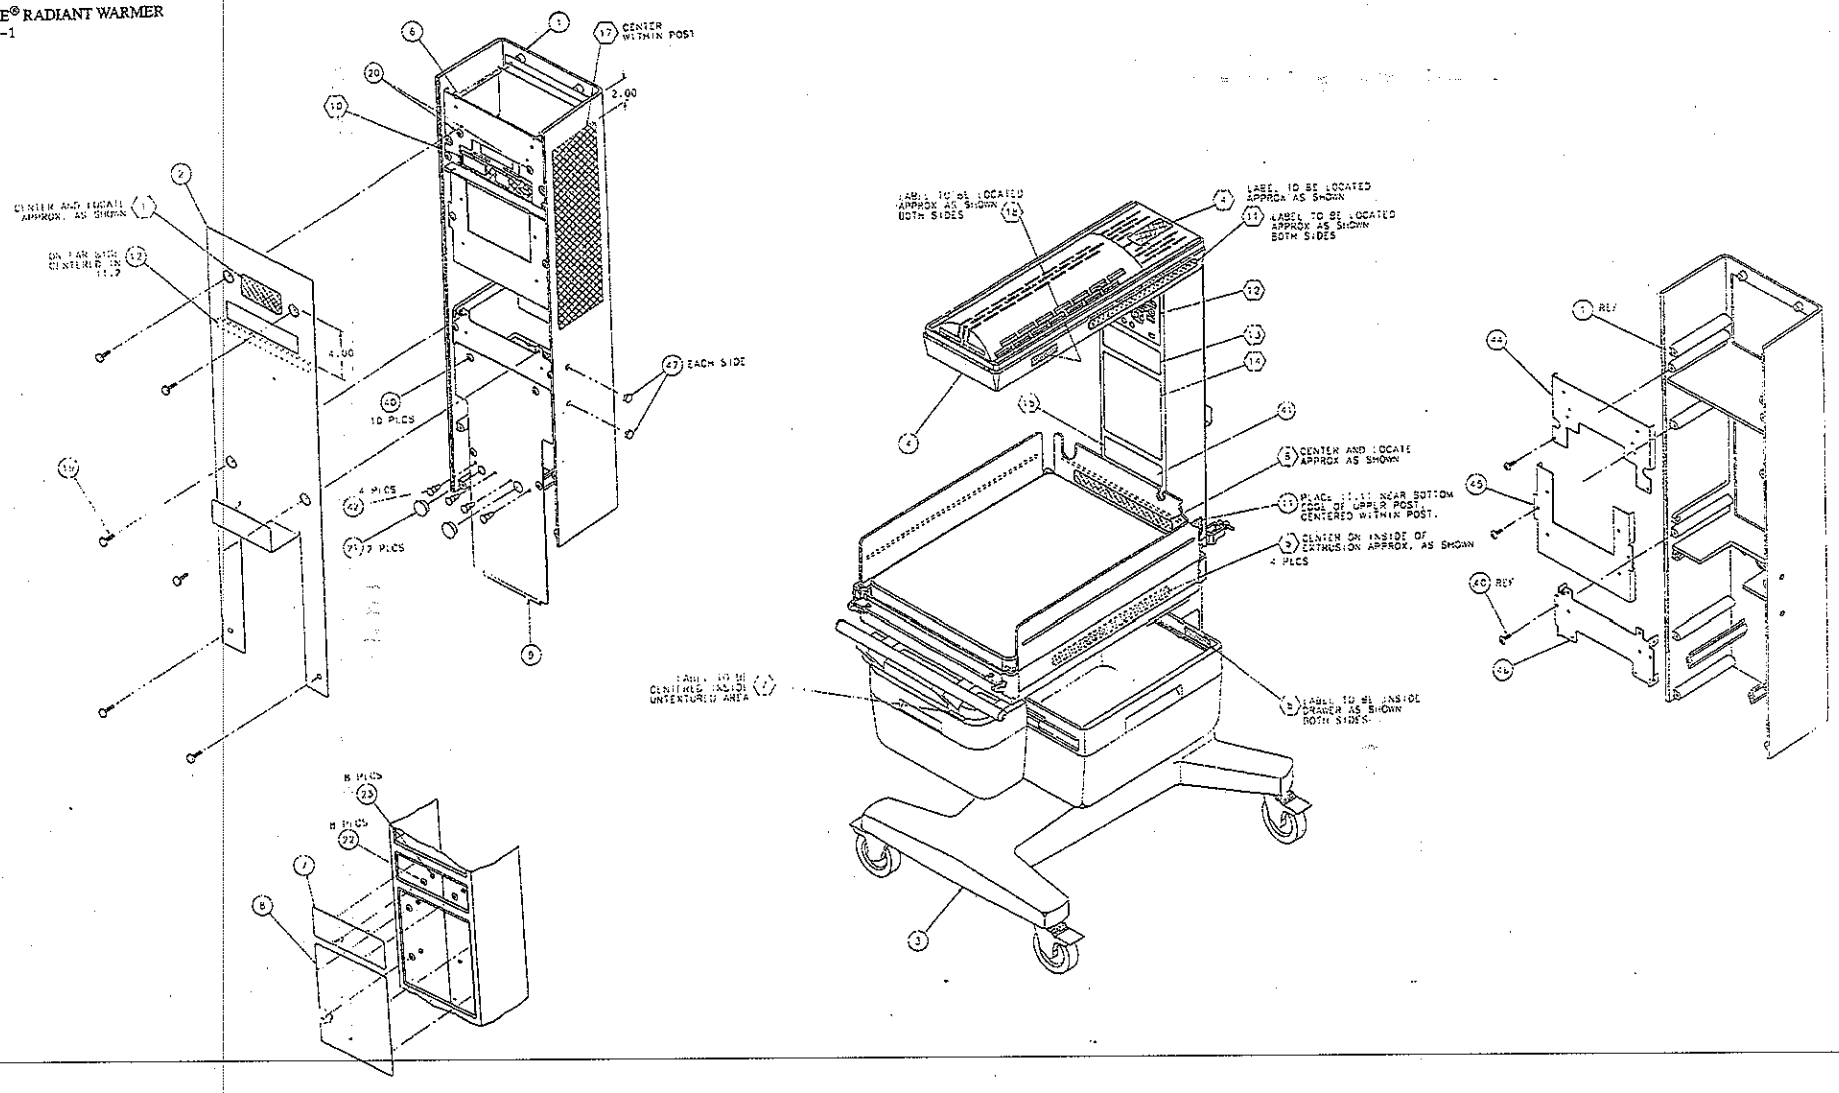

FIGURE 6.1D: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER ASSEMBLY NO RESUSCITATION VHA, 120V ENG (SHEET 1 OF 1)

TABLE 6.1D: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION VHA,120V, ENG, PARTS LIST

(Sheet 1 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		POST, UPPER ◇ (Order label item 17. Refer to Figure 6.1.)	81 020 02
2		COVER, UPPER POST ◇ (Order label item 1. Refer to Figure 6.1.)	81 020 06
3	REFER TO TABLE 6.2A	CART ASSEMBLY	81 020 71
4	REFER TO TABLE 6.4	WARMER HEAD ASSEMBLY, 120V	81 200 71
5		NOT USED	
6	REFER TO TABLE 6.6	CONTROLLER ASSY, RW 120V	81 300 70
7		PLATE, BLANK, MICROBLENDER	81 005 71
8		PLATE, BLANK, RESUS MODULE	81 005 72
9		CHASSIS, GAS SUPPLY, W/O CYCL HOLES	81 500 00
10		CABLE ASSY, AC PWR/LK, DOM 10FT	17 AZ1 04
11		LABEL, DATA TAG, SYSTEM	81 000 38
12		GASKET, REAR COVER	81 020 32
13 THRU 18		NOT USED	
19		SCR, 10-32X3/4, PN PH W/WSHR WHT	99 042 93
20		SCR, 8-32X3/4, TR PH SS	99 032 85
21		PLUG BUTTON, NYLON, 0.62 HOLE	81 500 42
22		WASHER, SHLDR, .12ID 6.25OD	81 005 70
23		NUT, HEX, 4-40 KEPS S ZI	99 103 33
24 AND 25		NOT USED	
26		PROBE, TEMP, SKIN, DUAL, REUSABLE	81 300 05
27 THRU 37		NOT USED	
38		CLAMP, CABLE, LOOP TY, NYL,.25ID CLAMP, CABLE, LOOP TY, NYL,.375ID	17 062 26 17 725 64
39		SCR, 8-32x3/8 TR PH SS	99 031 38
40		SCR, 10-32x3/8 TR PH SS NYLOK	99 041 36
41		NOT USED	

TABLE 6.1D: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, NO RESUSCITATION VHA,120V, ENG, PARTS LIST

(Sheet 2 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
42		PLUG, PNL FSTNG, .182 – .192, CANOE	68 602 02
43		UL/CUL LABEL	81 001 19
44		PLATE, HEAD SUPPORT	81 020 03
45		PLATE, BLENDER/RESUS SUPPORT	81 020 04
46		PLATE, RESUS/GAS SUPPLY SUPPORT	81 020 05
47		PLUG BUTTON, PLSTC, 0.38 HOLE	78 306 31
		LABEL LIST– ALL ITEMS IN FIGURE 6.1D, ENCLOSED IN ⬡	
1		LABEL, CAUT SHOCK HAZARD HI PRES, ENG	81 000 30
4		LABEL, CAUT SHOCK HAZARD, TOP COVER, ENG	81 200 50
5		LABEL, WARNING, SIDE/END PNL, ENG	78 162 56
6		LABEL, CAUTION, HEATING HAZARD, ENG	81 000 40
7		LABEL, LOAD LIMIT, 2 LBS, .91 KG	82 000 15
8		LABEL, LOAD LIMIT, 10 LBS, 4.5 KG	81 101 19
10		LABEL, REAR PANEL, 120 V, ENG	81 301 32
11		LABEL, EXPLOSION HAZARD, ENG	78 265 41CC
12		OVERLAY, ELEC FR PANEL, RW ENG	81 300 25
13		OVERLAY, BLENDER BLANK, FR PANEL, RW	81 600 34
14		OVERLAY, FR PNL, BLANK	81 400 40
15		OVERLAY, GAS FR PNL, BLANK	81 501 24
17		LABEL, USER PRECAUTION, ENG	81 101 35
18		LABEL, CAUT: OBJ ON WRMER/VNT ENG	81 000 90

Change 2

(This Page Intentionally Left Blank)

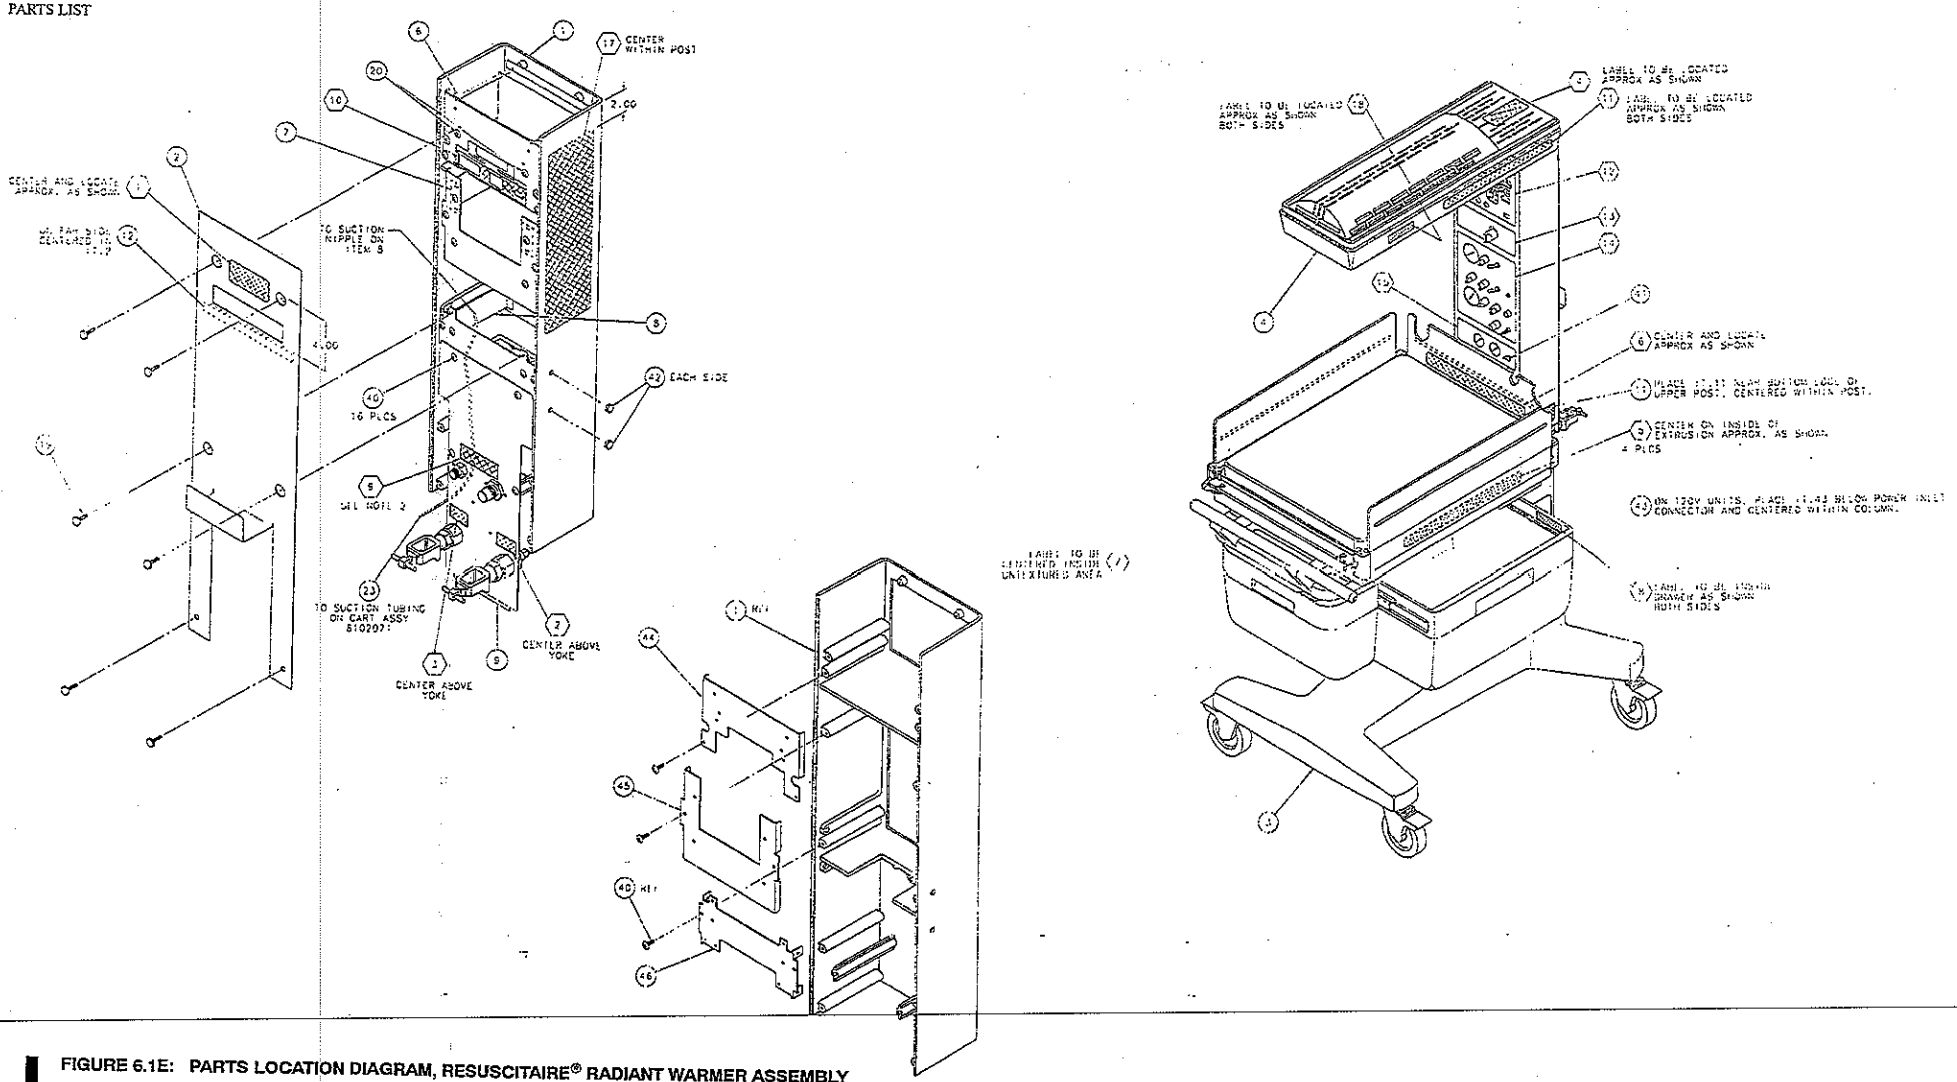
CENTER WITHIN POST
2.00
CENTER AND LOCATE APPROX. AS SHOWN
TO SUCTION NIPPLE ON ITEM 8
4.00
10 PLCS
EACH SIDE
SEE NOTE 2
TO SUCTION TUBING ON CART ASSY 810297
CENTER ABOVE YOKE
CENTER ABOVE YOKE
LABEL TO BE LOCATED APPROX AS SHOWN
LABEL TO BE LOCATED APPROX AS SHOWN BOTH SIDES
CENTER AND LOCATE APPROX AS SHOWN
PLACE FLAT HEAD BUTTON LOCK IN UPPER POST, CENTERED WITHIN POST.
CENTER ON INSIDE OF EXTRUSION APPROX. AS SHOWN 4 PLCS
ON 120V UNITS, PLACE 1.43 BELOW POWER INLET CONNECTOR AND CENTERED WITHIN COLUMN.
LABEL TO BE LOCATED ON DRAWER AS SHOWN BOTH SIDES
LABEL TO BE CENTERED INSIDE UNIT AT FIXED AREA

FIGURE 6.1E: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER ASSEMBLY VHA (SHEET 1 OF 1)

Change 2

TABLE 6.1E: RESUSCITAIRE® RADIANT WARMER ASSEMBLY VHA, PARTS LIST

(Sheet 1 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		POST, UPPER ◇	
		(Order label items 16 and 17. Refer to Figure 6.1.)	81 020 02
2		COVER, UPPER POST ◇	
		(Order label item 1. Refer to Figure 6.1.)	81 020 06
3	REFER TO TABLE 6.2B	CART ASSEMBLY 120V	81 010 70
		CART ASSEMBLY 240V	81 010 80
	REFER TO TABLE 6C	CART ASSEMBLY UK	81 020 81
4	REFER TO TABLE 6.4	WARMER HEAD ASSEMBLY, 120 V	81 200 71
		WARMER HEAD ASSEMBLY, 220/240 V	81 200 81
		WARMER HEAD ASSEMBLY, 220 V	81 200 84
5		NOT USED	
6	REFER TO TABLE 6.6	CONTROLLER ASSY, RW 120 V	81 300 70
		CONTROLLER ASSY, RW 220/240 V	81 300 80
		CONTROLLER ASSY, RW 220 V	81 300 83
7	REFER TO TABLE 6.7	BLENDER BLANK ASSY	81 600 70
		BLENDER ASSY	81 600 80
8A	REFER TO TABLE 6.8	RESUS MODULE W/O AUTOBREATH (OLD)	81 400 72
		RESUS MODULE W/O AUTOBREATH (NEW)	81 400 73
8B	REFER TO TABLE 6.9	RESUS MODULE WITH AUTOBREATH, ENG (OLD)	81 400 80
		RESUS MODULE WITH AUTOBREATH, ENG (NEW)	81 400 81
9A	REFER TO TABLE 6.10	GAS SUPPLY, O_2 PIPELINE (DISS), WITH O_2 RESERVE (YOKE FITTINGS)	81 500 80
		GAS SUPPLY, O_2 PIPELINE (NIST), WITH O_2 RESERVE (YOKE FITTINGS)	81 500 81
9B	REFER TO TABLE 6.11	GAS SUPPLY, O_2 PIPELINE (WHT HOSE), WITH O_2 RESERVE (DIN FITTINGS)	81 500 83
9C	REFER TO TABLE 6.12	GAS SUPPLY, O_2/AIR PIPELINE (DISS), WITH O_2/AIR RESERVE (YOKE FITTINGS)	81 500 85
		GAS SUPPLY, O_2/AIR PIPELINE (NIST), WITH O_2/AIR RESERVE (YOKE FITTINGS)	81 500 86
9D	REFER TO TABLE 6.13	GAS SUPPLY, O_2/AIR PIPELINE (BLU/YEL HOSE), WITH O_2/AIR RESERVE (DIN FITTINGS)	81 500 88
		GAS SUPPLY, O_2/AIR PIPELINE (GRN/YEL HOSE), WITH RESERVE (DIN FITTINGS)	81 500 90
10		CABLE ASSY, AC PWR/LK, DOM 10 FT	17 AZ1 04
		CABLE ASSY, AC PWR/LK, VDE 10 FT	17 AZ2 04
		CABLE ASSY, AC PWR/LK, RUS 10 FT	17 AZ2 03

Change 2

TABLE 6.1E: RESUSCITAIRE® RADIANT WARMER ASSEMBLY VHA, PARTS LIST

(Sheet 2 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
11		LABEL, DATA TAG, SYSTEM	81 000 37
		LABEL, DATA TAG, CE MARK	81 001 02
		LABEL, DATA TAG, SYSTEM, EMC	81 001 34
12		GASKET, REAR COVER	81 020 32
13 THRU 18		NOT USED	
19		SCR, 10-32X3/4, PN PH W/WSHR WHT	99 042 93
20		SCR, 8-32X3/4, TR PH SS	99 032 85
21		AIR HOSE WITH HANDTIGHT NUTS, 10 FT	78 464 10
		AIR HOSE, NIST & MA4, BLACK	81 501 45
		AIR HOSE, W/HAND NUTS, BLACK, 10 FT	81 501 50
22		HOSE, OXY, W/WING NUTS, WHITE, 10 FT	68 507 30
		HOSE, OXY, NIST & MK4, WHITE, 10 FT	68 507 50
		HOSE, OXY, W/WINGTYPE NUTS, 10 FT	78 465 10
23		TUBING, CLR PVC, 1/4 ID X 27.0 LG	08 136 07
24		NOT USED	
25		BREATHING CIRCUIT, DISPOSABLE	81 000 19
		BREATHING CIRCUIT, FOR BAGGING	81 001 26
26		PROBE, TEMP, SKIN, DUAL, REUSABLE	81 300 05
27		TANK BRACKET ASSY	81 001 14
28 THRU 37		NOT USED	
38		CLAMP, CABLE, LOOP TY, NYL,.25ID	17 062 26
		CLAMP, CABLE, LOOP TY, NYL,.375ID	17 725 64
39		SCR, 8-32x3/8 TR PH SS	99 031 38
40		SCR, 10-32x3/8 TR PH SS NYLOK	99 041 36
41		NUT, RD, BEV, 15-32-32 AL (BRITE)	99 112 96
42		PLUG BUTTON, PLSTC. 0.38 HOLE	78 306 31
43		DECLARATION, CE, RW COST REDUCT	00 935 17
		DECLARATION, EMC, RW COST REDUCT	00 935 18
		LABEL, UL/CUL, CLASSIFIED	81 001 19
44		PLATE, HEAD SUPPORT	81 020 03
45		PLATE, BLENDER/RESUS SUPPORT	81 020 04
46		PLATE, RESUS/GAS SUPPLY SUPPORT	81 020 05

Change 2

TABLE 6.1E: RESUSCITAIRE® RADIANT WARMER ASSEMBLY VHA, PARTS LIST

(Sheet 3 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
1		LABEL, CAUT SHOCK HAZARD HI PRES, ENG	81 000 30
		LABEL, CAUT SHOCK HAZARD HI PRES, SPN	81 000 31
		LABEL, CAUT SHOCK HAZARD HI PRES, FRN	81 000 32
		LABEL, CAUT SHOCK HAZARD HI PRES, GER	81 000 33
		LABEL, CAUT SHOCK HAZARD HI PRES, ITL	81 000 34
2		LABEL, AIR CYLINDER INLET, ENG	81 400 10
		LABEL, AIR CYLINDER INLET, SPN	81 400 11
		LABEL, AIR CYLINDER INLET, FRN	81 400 12
		LABEL, AIR CYLINDER INLET, GER	81 400 13
		LABEL, AIR CYLINDER INLET, ITL	81 400 14
		LABEL, OXY CYLINDER INLET, ENG	81 400 17
		LABEL, OXY CYLINDER INLET, SPN	81 400 18
		LABEL, OXY CYLINDER INLET, FRN	81 400 19
		LABEL, OXY CYLINDER INLET, ITL	81 400 35
3		LABEL, OXY CYLINDER INLET, ENG	81 400 17
		LABEL, OXY CYLINDER INLET, SPN	81 400 18
		LABEL, OXY CYLINDER INLET, FRN	81 400 19
		LABEL, OXY CYLINDER INLET, ITL	81 400 35
		LABEL, OXY CYLINDER INLET, GER	81 400 36
4		LABEL, CAUT SHOCK HAZARD, TOP COVER, ENG	81 200 50
		LABEL, CAUT SHOCK HAZARD, TOP COVER, SPN	81 200 51
		LABEL, CAUT SHOCK HAZARD, TOP COVER, FRN	81 200 52
		LABEL, CAUT SHOCK HAZARD, TOP COVER, GER	81 200 53
		LABEL, CAUT SHOCK HAZARD, TOP COVER, ITL	81 200 54
5		LABEL, WARNING, SIDE/END PNL, ENG	78 162 56
		LABEL, WARNING, SIDE/END PNL, SPN	78 162 57
		LABEL, WARNING, SIDE/END PNL, FRN	78 162 58
		LABEL, WARNING, SIDE/END PNL, GER	78 162 59
		LABEL, WARNING, SIDE/END PNL, ITL	78 162 63
6		LABEL, CAUTION, HEATING HAZARD, ENG	81 000 40
		LABEL, CAUTION, HEATING HAZARD, SPN	81 000 41
		LABEL, CAUTION, HEATING HAZARD, FRN	81 000 42
		LABEL, CAUTION, HEATING HAZARD, GER	81 000 43
		LABEL, CAUTION, HEATING HAZARD, FRN	81 000 44
7		LABEL, LOAD LIMIT, 2 LBS, .91 KG	82 000 15

Change 2

TABLE 6.1E: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 4 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
8		LABEL, LOAD LIMIT, 10 LBS, 4.5 KG	81 101 19
9		LABEL, PIPELINE INL WATER TRAP, ENG	81 500 91
		LABEL, PIPELINE INL WATER TRAP, SPN	81 500 92
		LABEL, PIPELINE INL WATER TRAP, FRN	81 500 93
		LABEL, PIPELINE INL WATER TRAP, GER	81 500 94
		LABEL, PIPELINE INL WATER TRAP, ITL	81 500 95
10		LABEL, REAR PANEL, 120 V, ENG	81 301 32
		LABEL, REAR PANEL, 120 V SPN	81 301 33
		LABEL, REAR PANEL, 120 V FRN	81 301 34
		LABEL, REAR PANEL, 220 V/240 V, ENG	81 301 35
		LABEL, REAR PANEL, 220 V/240 V, SPN	81 301 36
		LABEL, REAR PANEL, 220 V/240 V, FRN	81 301 37
		LABEL, REAR PANEL, 220 V, GER	81 301 38
		LABEL, REAR PANEL, 220 V/240 V, ITL	81 301 39
11		LABEL, EXPLOSION HAZARD, ENG	78 265 41CC
		LABEL, EXPLOSION HAZARD, SPN	78 265 42CC
		LABEL, EXPLOSION HAZARD, ITL	78 265 43CC
		LABEL, EXPLOSION HAZARD, GER	78 265 44CC
12		OVERLAY, ELEC FR PANEL, RW ENG	81 300 25
		OVERLAY, ELEC FR PANEL, RW SPN	81 300 26
		OVERLAY, ELEC FR PANEL, RW FRN	81 300 27
		OVERLAY, ELEC FR PANEL, RW GER	81 300 28
		OVERLAY, ELEC FR PANEL, RW ITL	81 300 29
13		OVERLAY, BLENDER FR PANEL, RW ENG	81 600 27
		OVERLAY, BLENDER FR PANEL, RW SPN	81 600 28
		OVERLAY, BLENDER FR PANEL, RW FRN	81 600 29
		OVERLAY, BLENDER FR PANEL, RW GER	81 600 30
		OVERLAY, BLENDER FR PANEL, RW ITL	81 600 31
		OVERLAY, BLENDER BLANK, FR PANEL, RW	81 600 34
14		OVERLAY, AUTO FR. PL, RW ENG	81 400 20
		OVERLAY, AUTO FR PNL, RW SPN	81 400 21
		OVERLAY, AUTO FR PNL, RW FRN	81 400 22
		OVERLAY, AUTO FR PNL, RW GER	81 400 23
		OVERLAY, AUTO FR PNL, RW ITL	81 400 24
		OVERLAY, W/O AUTO FR PNL, RW ENG	81 400 27
		OVERLAY, W/O AUTO FR PNL, RW SPN	81 400 28
		OVERLAY, W/O AUTO FR PNL, RW FRN	81 400 29
		OVERLAY, W/O AUTO FR PNL, RW GER	81 400 30
		OVERLAY, W/O AUTO FR PNL, RW ITL	81 400 31
		OVERLAY, FR PNL, BLANK	81 400 40

TABLE 6.1E: RESUSCITAIRE® RADIANT WARMER ASSEMBLY, PARTS LIST

(Sheet 5 of 5)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		LABEL LIST– ALL ITEMS IN FIGURE 6.1, ENCLOSED IN ⬡	
15		OVERLAY, O_2 GAS FR PNL, RW E	81 500 50
		OVERLAY, O_2 GAS FR PNL, RW FR	81 500 52
		OVERLAY, O_2/AIR GAS FR PNL, RW E	81 500 60
		OVERLAY, O_2/AIR GAS FR PNL, RW S	81 500 61
		OVERLAY, O_2/AIR GAS FR PNL, RW F	81 500 62
		OVERLAY, O_2/AIR GAS FR PNL, RW G	81 500 63
		OVERLAY, O_2/AIR GAS FR PNL, RW I	81 500 64
17		LABEL, USER PRECAUTION, ENG	81 101 35
		LABEL, USER PRECAUTION, SPN	81 101 36
		LABEL, USER PRECAUTION, FRN	81 101 37
		LABEL, USER PRECAUTION, GER	81 101 38
		LABEL, USER PRECAUTION, ITL	81 101 39

Change 2

NOTES:
1. IT.24 NOT SHOWN, TO BE PLACED IN DRAWER (IT.9)

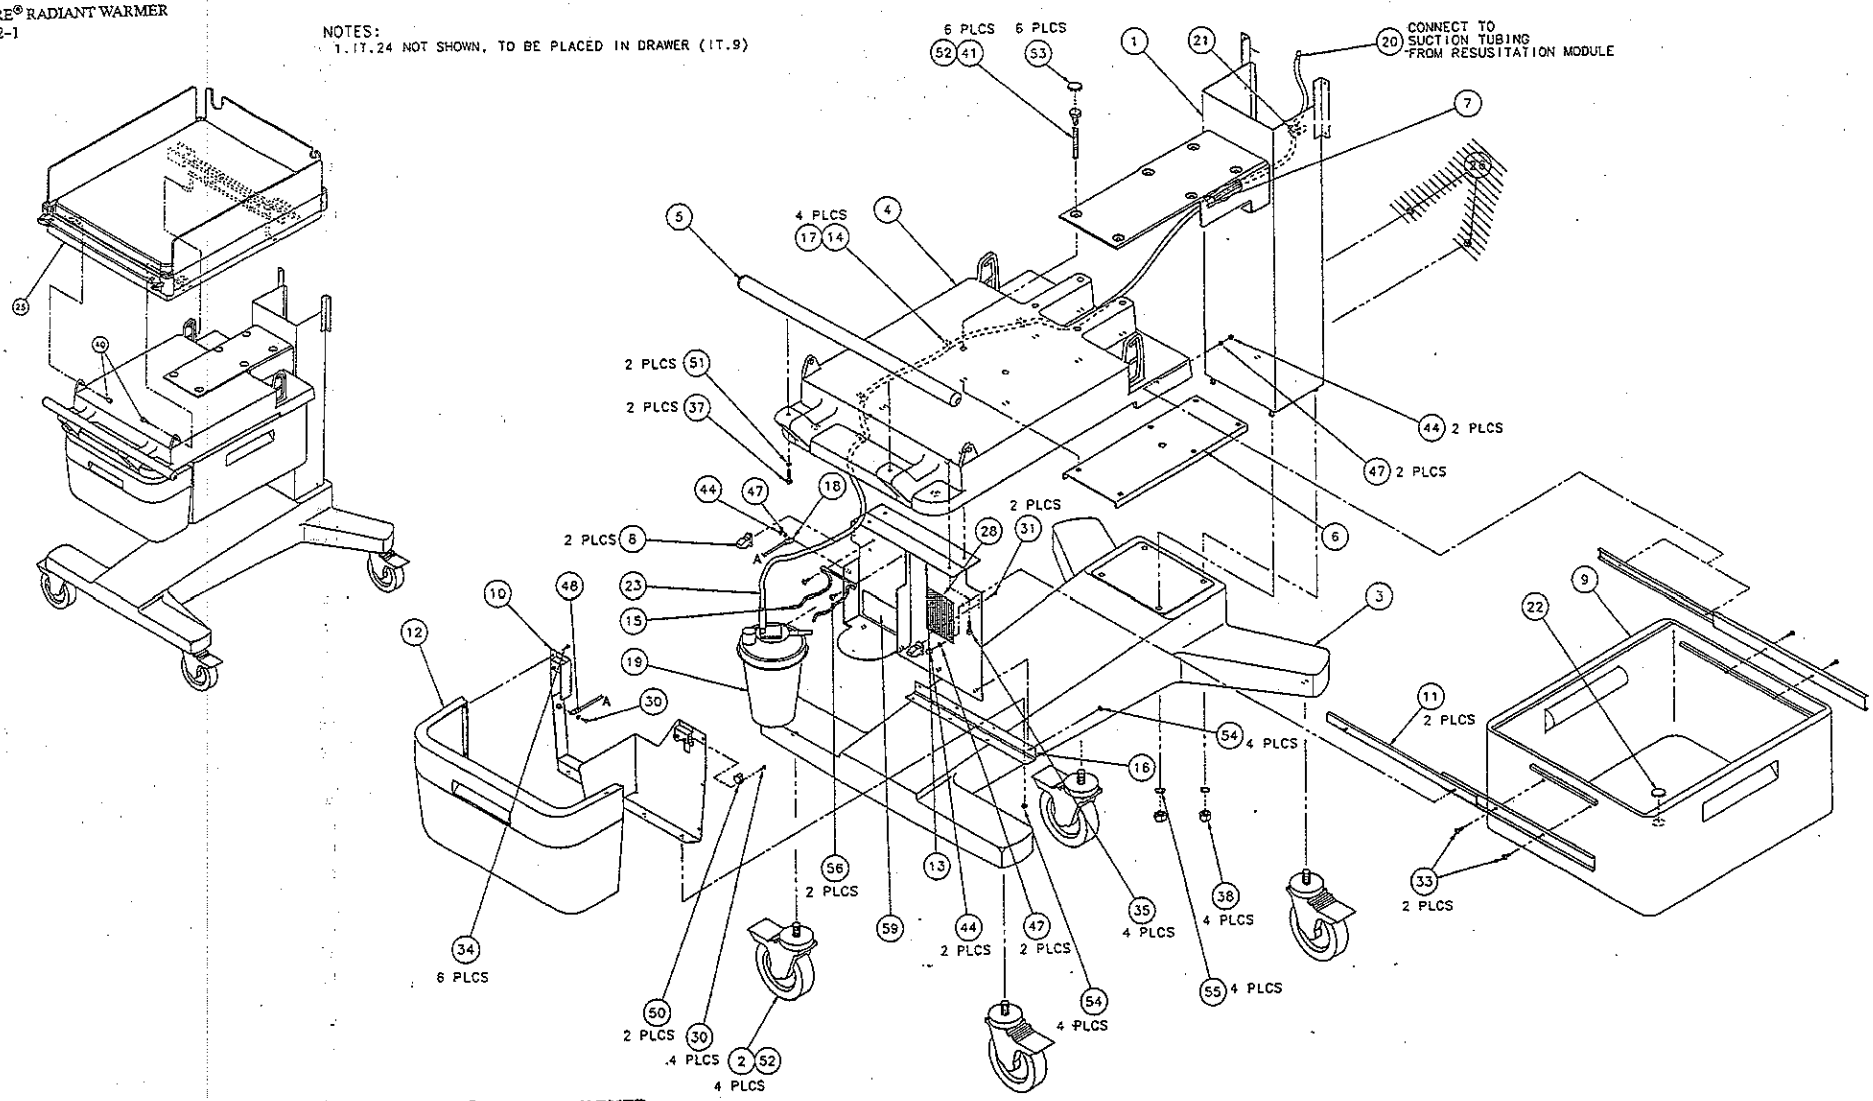

FIGURE 6.2: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER CART ASSEMBLY (SHEET 1 OF 1)
Change 2

TABLE 6.2: RESUSCITAIRE® RADIANT WARMER CART ASSEMBLY, PARTS LIST

(Sheet 1 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
		CART ASSEMBLY	81 020 71
		CART ASSEMBLY (NO SUCTION)	81 020 73
1		COLUMN, LOWER	81 020 12
2		CASTER, SWIVEL, 5.00 W/BK, GRA, URTH	81 005 07
3		BASE CASTING MACHINED	81 020 01
4		FRAME SUPPORT	81 020 14
5		HANDLE, FRONT	81 020 16
6		PLATE, MTG, FRAME SUPPORT	81 020 13
7*		BUSHING, SNAP-IN, .38ID .50 HOLE	17 062 42
8		BLOCK, LATCH	81 020 17
9		DRAWER, PASS-THRU ◇ (Order label item 8. Refer to Figure 6.1.)	81 020 08
10		PLATE, REAR RESUS COMPARTMENT	81 020 24
11		SLIDE, PASS-THRU DRAWER	81 101 12
12		COVER, RESUS COMPARTMENT ◇ (Order label item 7. Refer to Figure 6.1)	81 020 18
13		PLATE, RESUS COMP WELDMENT	81 020 19
14*		CLAMP, CABLE, SPR TY, NYL .38ID	81 020 20
15*		HOLDER, SUCTION BOTTLE	81 000 03
16		HINGE, RESUS COMPARTMENT	81 020 22
17*		SCR, SLFTPG, 6-32 X 5/16 F PN PHS4	99 084 84
18		CORD, .25OD 5.00LG W/NL EYELETS	81 020 23
19*		BOTTLE, SUCTION, 800 CC, MARKED DISPOSABLE BOX OF 100	81 001 15
		RESUSABLE BOTTLE	08 131 00
20*		NIPPLE, NYLON, 3/16 x 3/16 TUBE*	81 000 13
21*		CLIP, PLSTC, SNAP, SLFADH, 0.38 ID	78 163 40
22		PLUG BUTTON, WHT PLSTC .875 HOLE	17 AZ6 08
23*		TUBING, SUCT W/END .25ID 48.0 LG	81 001 17
24*		TUBING, SUCT W/END .25ID 6' LG	81 001 16
25		BASSINET ASSEMBLY (INCLUDES ITEMS 60 THRU 64)	81 100 81
26		NOT USED	
27		NOT USED	
28*		LABEL, SUCTION FLOW	81 101 23
29		NOT USED	
30		SCR, 4-40X1/4 TR PH SS NYLOK	99 010 67

*used on PN 81 020 71, only

Change 1

TABLE 6.2: RESUSCITAIRE® RADIANT WARMER CART ASSEMBLY, PARTS LIST

(Sheet 2 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
31		SCR, 8-32X3/8 FL PH SS 100 DEG N	99 031 54
32		NOT USED	
33		SCR, 8-32X3/8 TR PH SS NYLOK	99 031 52
34		SCR, 6-32X1/4 PN PH S ZI SEMSC	99 022 84
35		SCR, 10-32X1/2 TR PH SS NYLOK	99 042 05
36		NOT USED	
37		SCR, 1/4-20X5/8 CP SK BUTTON SS	99 056 66
38		NUT HEX, 3/8-16 ES S ZI	99 111 25
39		NOT USED	
40		SCR, SHLDR, .38D .38L 5/16-18 SS	99 195 22
41		SCR, 3/8-16X3.50 CP HX SS	99 068 61
42 AND 43		NOT USED	
44		NUT, ACORN, 8-32 SS	99 106 21
45 AND 46		NOT USED	
47		WSHR, LK, INT, #8 SS	99 122 92
48		WSHR, FL, #10 SS (.062 THK)	99 123 62
49		NOT USED	
50		CATCH, NYLATCH ROLLER	81 100 63
51		WSHR, LK, INT, 1/4 SS	99 125 54
52		LOCTITE #242	99 901 77
53		PLUG BUTTON, NYLON, 0.88 HOLE	78 161 20
54		NUT, HEX, 8-32 KEPS S ZI	99 106 32
55		WASHER, FL,3/8 D .75OD .065T SS	99 126 71
56		SCREW, 10-32X3/8 TR PH SS NYLOK	99 041 36
57 AND 58		NOT USED	
59*		LABEL, SUCTION JAR, PLACEMENT	81 101 24
60		BASSINET SUB-ASSEMBLY	81 100 72

*used on PN 81 020 71, only

TABLE 6.2: RESUSCITAIRE® RADIANT WARMER CART ASSEMBLY, PARTS LIST

(Sheet 3 of 3)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
61		REAR PANEL ASSEMBLY, ENG	81 900 01
		REAR PANEL ASSEMBLY, SPN	81 900 11
		REAR PANEL ASSEMBLY, FRN	81 900 21
		REAR PANEL ASSEMBLY, GER	81 900 31
		REAR PANEL ASSEMBLY, ITL	81 900 41
62		SIDE PANEL ASSEMBLY, ENG	81 900 00
		SIDE PANEL ASSEMBLY, SPN	81 900 10
		SIDE PANEL ASSEMBLY, FRN	81 900 20
		SIDE PANEL ASSEMBLY, GER	81 900 30
		SIDE PANEL ASSEMBLY, ITL	81 900 40
63		FRONT PANEL ASSEMBLY, ENG	81 900 02
		FRONT PANEL ASSEMBLY, SPN	81 900 12
		FRONT PANEL ASSEMBLY, FRN	81 900 22
		FRONT PANEL ASSEMBLY, GER	81 900 32
		FRONT PANEL ASSEMBLY, ITL	81 900 42
64		MATTRESS ASSY	78 170 20

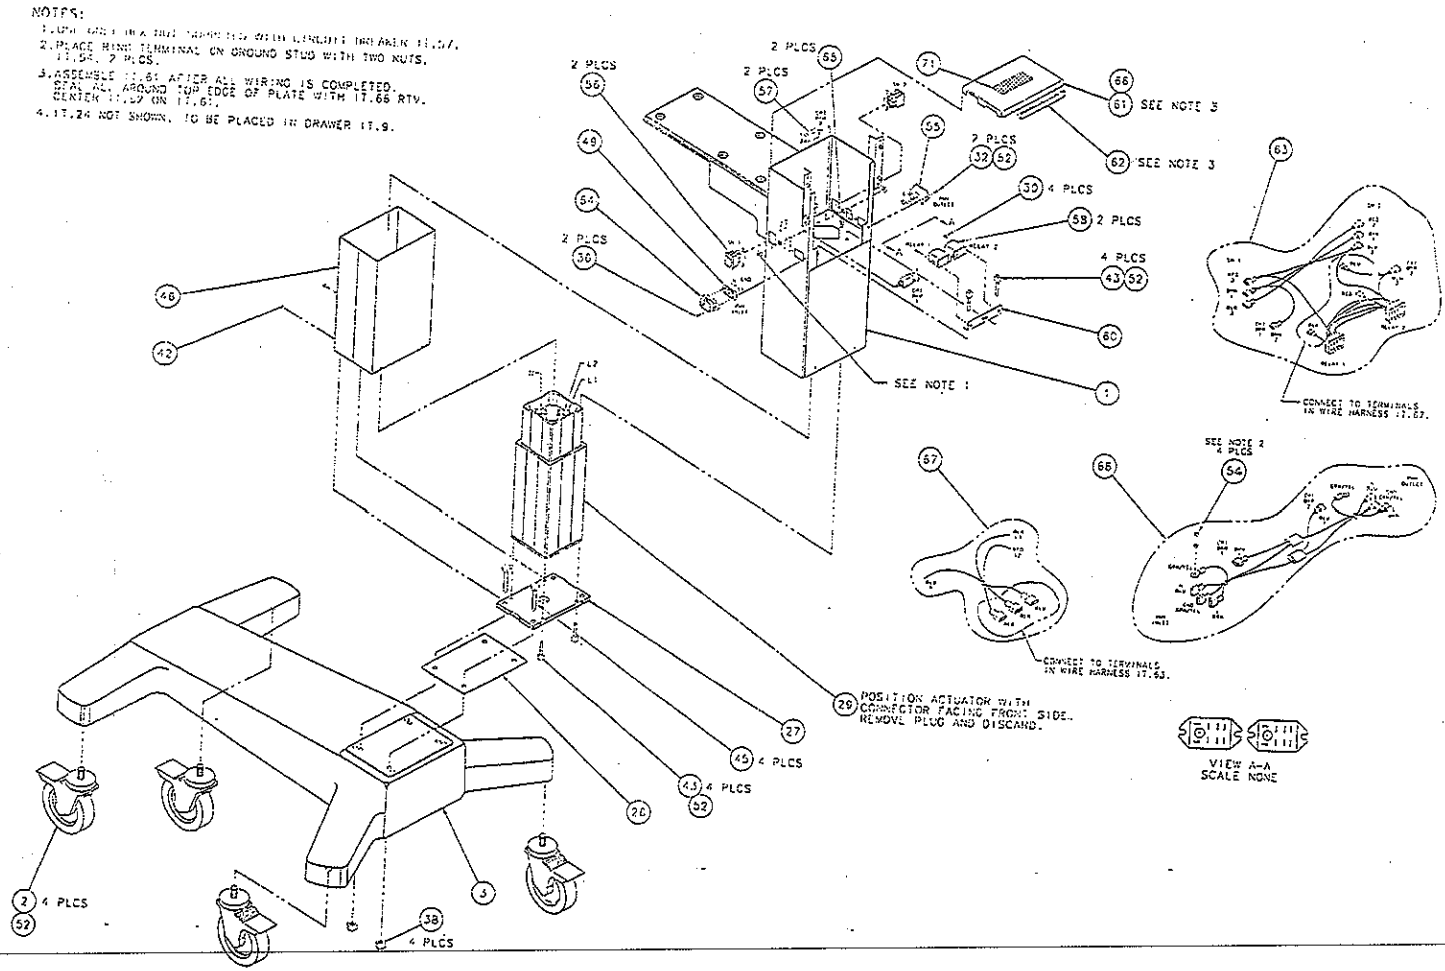
NOTES:
2. PLACE RING TERMINAL ON GROUND STUD WITH TWO NUTS.
3. ASSEMBLE 17.65 AFTER ALL WIRING IS COMPLETED.
SEAL ALL AROUND TOP EDGE OF PLATE WITH 17.66 RTV.
4. 17.24 NOT SHOWN. TO BE PLACED IN DRAWER 17.9.
SEE NOTE 1
SEE NOTE 3
SEE NOTE 3
SEE NOTE 2
4 PLCS
2 PLCS
4 PLCS
4 PLCS
4 PLCS
4 PLCS
CONNECT TO TERMINALS IN WIRE HARNESS 17.67.
CONNECT TO TERMINALS IN WIRE HARNESS 17.63.
POSITION ACTUATOR WITH CONNECTOR FACING FRONT SIDE. REMOVE PLUG AND DISCARD.
VIEW A-A
SCALE NONE

FIGURE 6.2A: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER BASIC VHA CART ASSEMBLY (SHEET 1 OF 2)

Change 2

TABLE 6.2A: RESUSCITAIRE® RADIANT WARMER BASIC VHA CART ASSEMBLY, PARTS LIST

(Sheet 1 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		OUTER LOWER COLUMN	82 010 03
2		SWIVEL CASTER 5.00, W/BRAKE, GRAY	81 005 07
3		BASE CASTING	81 020 01
4		SUPPORT FRAME	81 020 14
5		FRONT HANDLE	81 020 16
6		SUPPORT FRAME MOUNTING PLATE	81 010 13
7		NOT USED	
8		LATCH BLOCK	81 020 17
9		PASS THRU DRAWER	81 020 08
10		RESUS COMPARTMENT REAR PLATE	81 020 24
11		PASS THRU DRAWER SLIDE	81 101 12
12		RESUS COMPARTMENT COVER	81 020 18
13		RESUS COMPT WELDMENT PLATE	81 020 19
14 AND 15		NOT USED	
16		RESUS COMPARTMENT HINGE	81 020 22
17		NOT USED	
18		CORD WITH NYLON EYELETS	81 020 23
19 THRU 21		NOT USED	
22		WHITE PLASTIC PLUG BUTTON, 0.88	17 AZ 608
23 AND 24		NOT USED	
25		BASSINET ASSEMBLY	81 100 81
26		BASE DRESS PLATE	82 010 00
27		ACTUATOR MOUNTING PLATE	82 010 01
28		NOT USED	
29		120V ACTUATOR	83 400 20
30		SCREW, 4 – 40 X 1/4 TR PH SS NYLOK	99 010 67
31		SCREW, 8 – 32 X 3/8 FL PH SS 100D NYK	99 031 54
32		SCREW, 4 – 40 X 1/4, FL PH SS	99 010 62
33		SCREW, 8 – 32 X 3/8 TR PH SS NYLOK	99 031 52
34		SCREW, 6 – 32 X 1/4 PN PH S Z1 SEMSC	99 022 84
35		SCREW, 10 – 32 X 1/2 TR PH SS NYLOK	99 042 05
36		SCREW, 4 – 40 X 3/8 RD PH SS NYLOK	99 011 14
37		SCREW, 1/4 – 20 X 5/8 CAP, BUTTON	99 056 66
38		HEX NUT, 3/8 – 16 ES S Z1	99 111 25
39		NOT USED	
40		SHOULDER SCREW,0.38D, 0.38L 5/18–18	99 195 22
41		SCREW, 3/8 – 16 X 3.50 CP HX SS	99 068 61

Change 2

TABLE 6.2A: RESUSCITAIRE® RADIANT WARMER BASIC VHA CART ASSEMBLY, PARTS LIST

(Sheet 2 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
42		SCREW, 6 - 32 X 1/4 RD PH SS NYLOK	99 022 86
43		SCREW, M6 X 1.0 X 25 LG CP SK SS	99 998 76
44		ACORN NUT, 8 - 32 SS	99 106 21
45		SCREW, 3/8 - 16 X 1.75 CP HX S	99 068 91
46		INNER LOWER COLUMN	82 010 02
47		LOCK WASHER, INT #8 SS	99 122 92
48		FLAT WASHER, #10 SS (0.062 THK)	99 123 62
49		AC POWER CONNECTOR MALE10A, 250V	17 735 63
50		NYLATCH ROLLER CATCH	81 100 63
51		LOCK WASHER, INT 1/4 SS	99 125 54
52		LOCTITE #242	AR
53		NYLON PLUG BUTTON 0.88	78 161 20
54		HEX NUT, 8 - 32 KEPS S Z1	99 106 32
55		AC CONNECTOR FEMALE, 10A 250V	17 735 64
56		SWITCH, RKR, DPDT, 10A/250V	17 683 52
57		CIRCUIT BRKR, SP THERM, 6.0A 250/28V	17 BH 236
58		RELAY, SPDT, 10A 250VAC UL/CSA	17 653 09
59		NOT USED	
60		RELAY MOUNTING BRACKET	82 010 06
61		OUTER PLATE SEPARATOR, LWR COL	82 010 04
62		SEPARATOR PLATE GASKET	82 010 07
63		WIRE HARNESS	82 010 05
64		CORD LOCK ADAPTOR	17 734 12
65		GROUND LABEL	68 212 00
66		RTV DC732	AR
67		ACTUATOR WIRE HARNESS	82 010 11
68		PWR IN PWR OUT WIRE HARNESS	82 010 12
69		NOT USED	
70		NOT USED	
71		REPLACE COVER LABEL	82 010 14

Change 2

(This Page Intentionally Left Blank)

Change 2

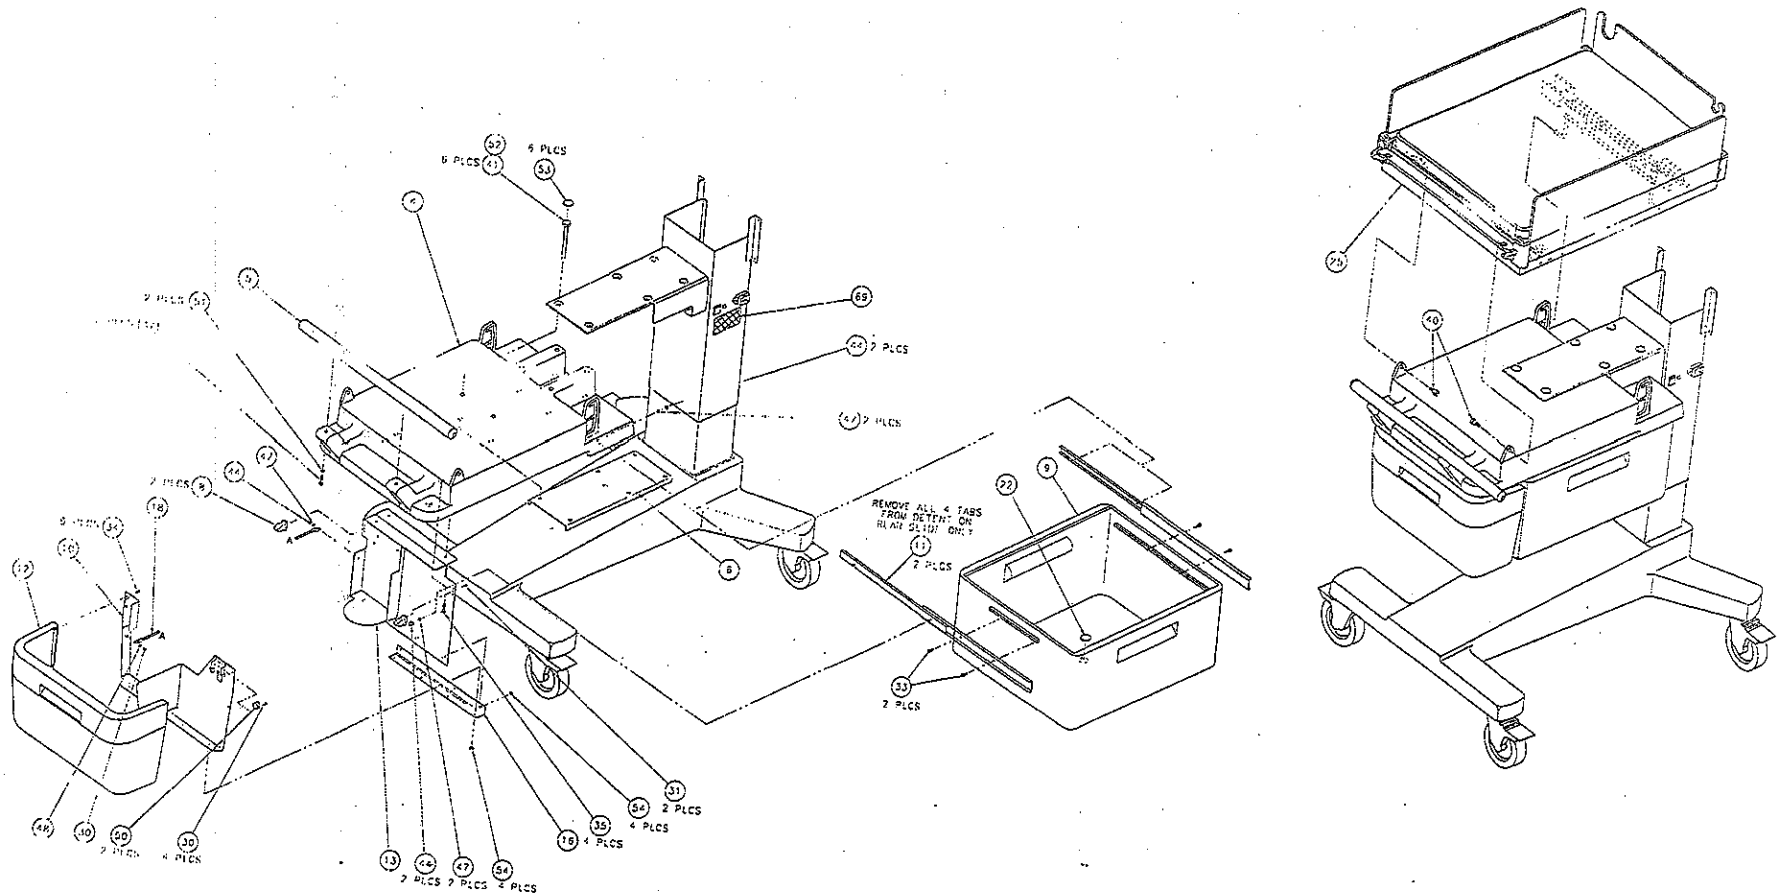

FIGURE 6.2A: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER BASIC VHA CART ASSEMBLY (SHEET 2 OF 2)

Change 2

(This Page Intentionally Left Blank)

Change 2

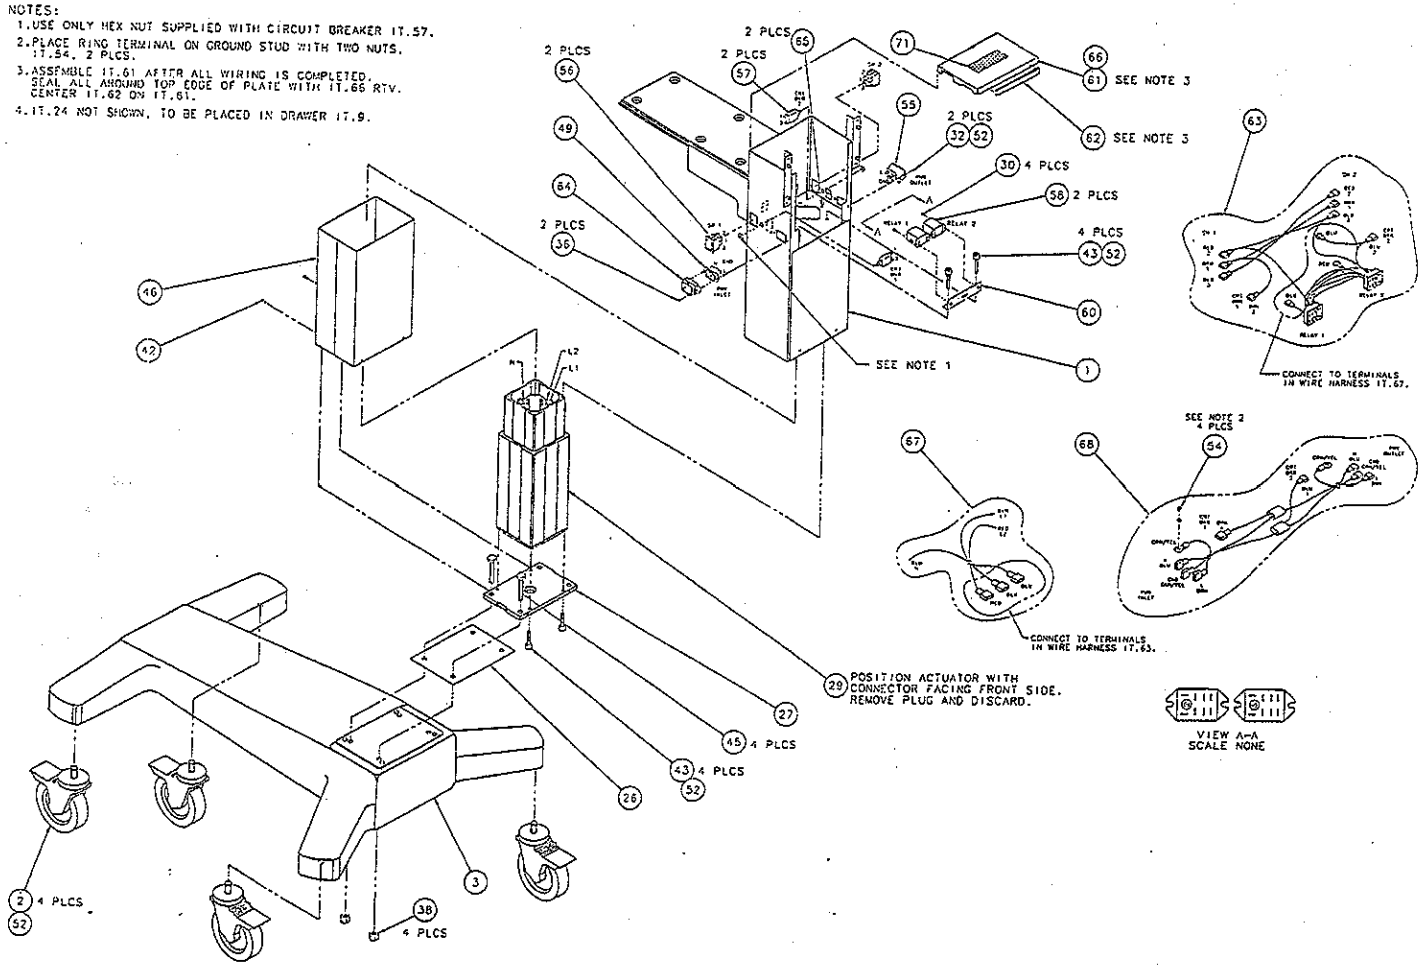
NOTES:
1. USE ONLY HEX NUT SUPPLIED WITH CIRCUIT BREAKER IT.57.
2. PLACE RING TERMINAL ON GROUND STUD WITH TWO NUTS, IT.54, 2 PLCS.
3. ASSEMBLE IT.61 AFTER ALL WIRING IS COMPLETED. SEAL ALL AROUND TOP EDGE OF PLATE WITH IT.66 RTV. CENTER IT.62 ON IT.61.
4. IT.24 NOT SHOWN, TO BE PLACED IN DRAWER IT.9.
2 PLCS
SEE NOTE 3
SEE NOTE 1
4 PLCS
CONNECT TO TERMINALS IN WIRE HARNESS IT.67.
CONNECT TO TERMINALS IN WIRE HARNESS IT.63.
POSITION ACTUATOR WITH CONNECTOR FACING FRONT SIDE. REMOVE PLUG AND DISCARD.
VIEW A-A
SCALE NONE

FIGURE 6.2B: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 120V, 220–240V VHA CART ASSEMBLY (SHEET 1 OF 2)

(This Page Intentionally Left Blank)

Change 2

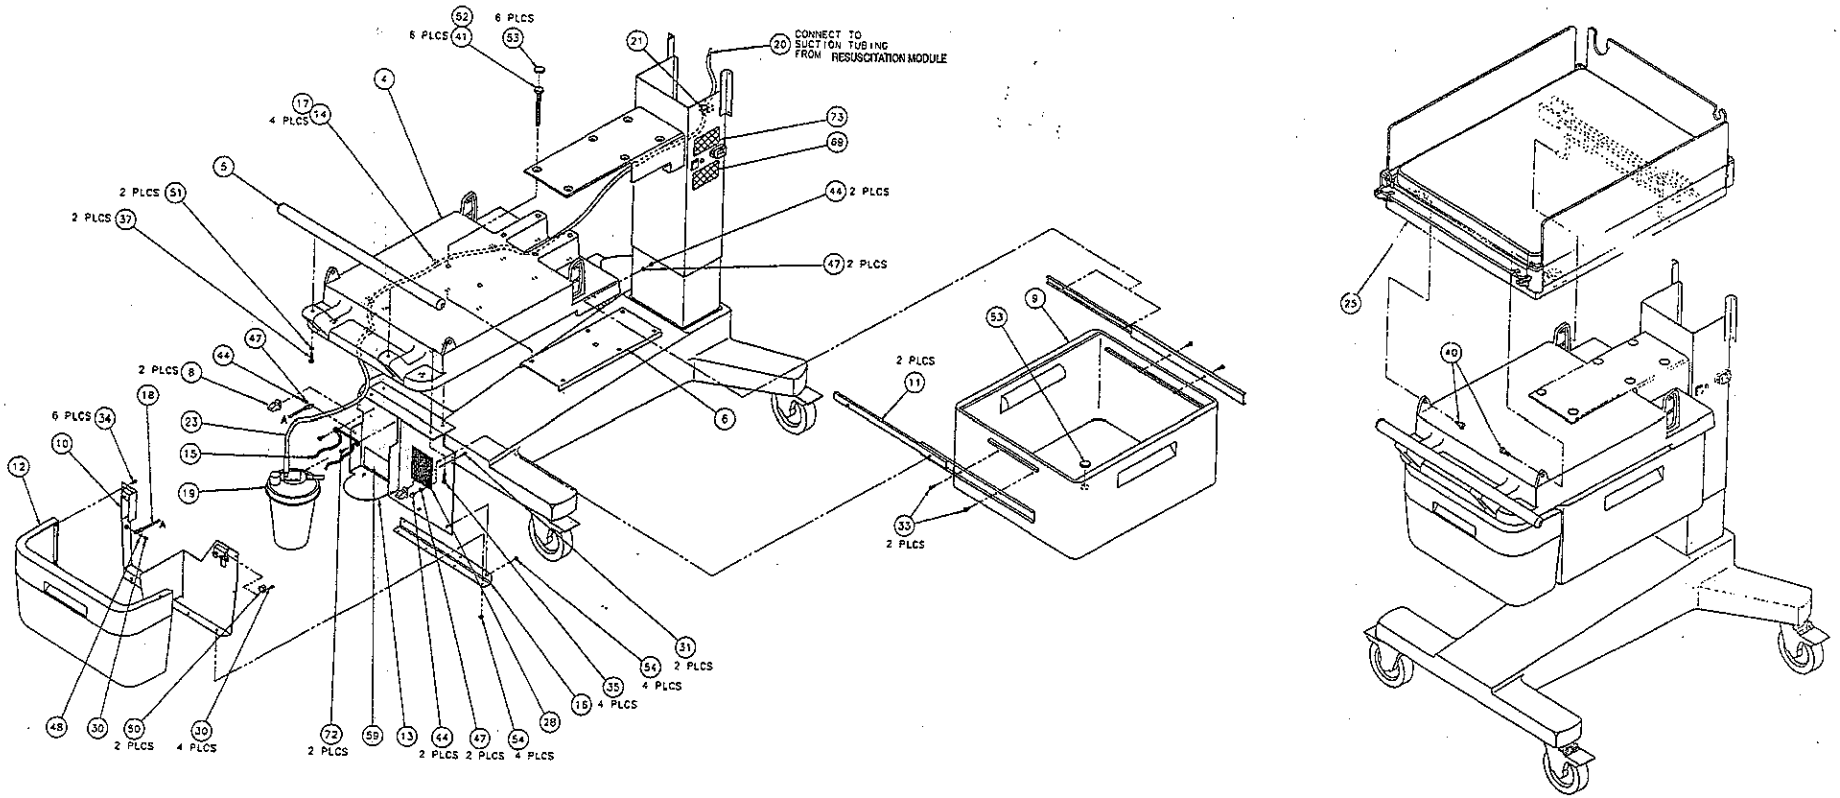

FIGURE 6.2B: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 120V, 220–240V VHA CART ASSEMBLY (SHEET 2 OF 2)

Change 2

TABLE 6.2B: RESUSCITAIRE® RADIANT WARMER 120V, 200–240V VHA CART ASSEMBLY, PARTS LIST

(Sheet 1 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		OUTER LOWER COLUMN	82 010 03
2		SWIVEL CASTER 5.00, W/BRAKE, GRAY	81 005 07
3		BASE CASTING	81 020 01
4		SUPPORT FRAME	81 020 14
5		FRONT HANDLE	81 020 16
6		SUPPORT FRAME MOUNTING PLATE	81 010 13
7		SNAP–IN BUSHING, 0.41 ID 0.562 HOLE	82 101 09
8		LATCH BLOCK	81 020 17
9		PASS THRU DRAWER	81 020 08
10		RESUS COMPARTMENT REAR PLATE	81 020 24
11		PAS THRU DRAWER SLIDE	81 101 12
12		RESUS COMPARTMENT COVER	81 020 18
13		RESUS COMPT WELDMENT PLATE	81 020 19
14		CABLE CLAMP, SPR TY NLY	81 020 20
15		SUCTION BOTTLE HOLDER	81 000 03
16		RESUS COMPARTMENT HINGE	81 020 22
17		SELF TAPPING SCREW, 6 – 32 X 5/16	99 084 84
18		CORD WITH NYLON EYELETS	81 020 23
19		SUCTION BOTTLE 800 CC	81 001 15
20		NYLON NIPPLE 3/16 X 3/16 TUBE	81 000 13
21		PLASTIC CLIP SNAP, SLFADH	78 163 40
22		WHITE PLASTIC PLUG BUTTON, 0.88	17 AZ 608
23		SUCTION TUBING W/END .25ID 42.0" LG	82 010 10
24		SUCTION TUBING W/END .25ID 6' LG	81 001 16
25		BASSINET ASSEMBLY	81 100 81
26		BASE DRESS PLATE	82 010 00
27		ACTUATOR MOUNTING PLATE	82 010 01
28		SUCTION FLOW LABEL	81 101 23
29		120V ACTUATOR	83 400 20
		220V ACTUATOR	83 400 21
30		SCREW, 4 – 40 X 1/4 TR PH SS NYLOK	99 010 67
31		SCREW, 8 – 32 X 3/8 FL PH SS 100D NYK	99 031 54
32		SCREW, 4 – 40 X 1/4, FL PH SS	99 010 62
33		SCREW, 8 – 32 X 3/8 TR PH SS NYLOK	99 031 52
34		SCREW, 6 – 32 X 1/4 PN PH S Z1 SEMSC	99 022 84
35		SCREW, 10 – 32 X 1/2 TR PH SS NYLOK	99 042 05
36		SCREW, 4 – 40 X 3/8 RD PH SS NYLOK	99 011 14

Change 2

TABLE 6.2B: RESUSCITAIRE® RADIANT WARMER 120V, 200-240V VHA CART ASSEMBLY, PARTS LIST

(Sheet 2 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
37		SCREW, 1/4 -20 X 5/8 CAP, BUTTON	99 056 66
38		HEX NUT, 3/8 - 16 ES S Z1	99 111 25
39		NOT USED	
40		SHOULDER SCREW,0.38D, 0.38L 5/18-18	99 195 22
41		SCREW, 3/8 - 16 X 3.50 CP HX SS	99 068 61
42		SCREW, 6 - 32 X 1/4 RD PH SS NYLOK	99 022 86
43		SCREW, M6 X 1.0 X 25 LG CP SK SS	99 998 76
44		ACORN NUT, 8 - 32 SS	99 106 21
45		SCREW, 3/8 - 16 X 1.75 CP HX S	99 068 91
46		INNER LOWER COLUMN	82 010 02
47		LOCK WASHER, INT #8 SS	99 122 92
48		NOT USED	
49		AC POWER CONNECTOR MALE10A, 250V	17 735 63
50		NYLATCH ROLLER CATCH	81 100 63
51		LOCK WASHER, INT 1/4 SS	99 125 54
52		LOCTITE #242	AR
53		NYLON PLUG BUTTON 0.88	78 161 20
54		HEX NUT, 8 - 32 KEPS S Z1	99 106 32
55		AC CONNECTOR FEMALE, 10A 250V	17 735 64
56		SWITCH, RKR, DPDT, 10A/250V	17 683 52
57		CIRCUIT BRKR, SP THERM, 6.0A 250/28V	17 BH 236
58		RELAY, SPDT, 10A 250VAC UL/CSA	17 653 09
59		SUCTION JAR PLACEMENT LABEL	81 101 24
60		RELAY MOUNTING BRACKET	82 010 06
61		OUTER PLATE SEPARATOR, LWR COL	82 010 04
62		SEPARATOR PLATE GASKET	82 010 07
63		WIRE HARNESS	82 010 05
64		CORD LOCK ADAPTOR	17 734 12
65		GROUND LABEL	68 212 00
66		RTV DC732	AR
67		ACTUATOR WIRE HARNESS	82 010 11
68		PWR IN PWR OUT WIRE HARNESS	82 010 12
69		NOT USED	
70		NOT USED	
71		REPLACE COVER LABEL	82 010 14

Change 2

(This Page Intentionally Left Blank)

Change 2

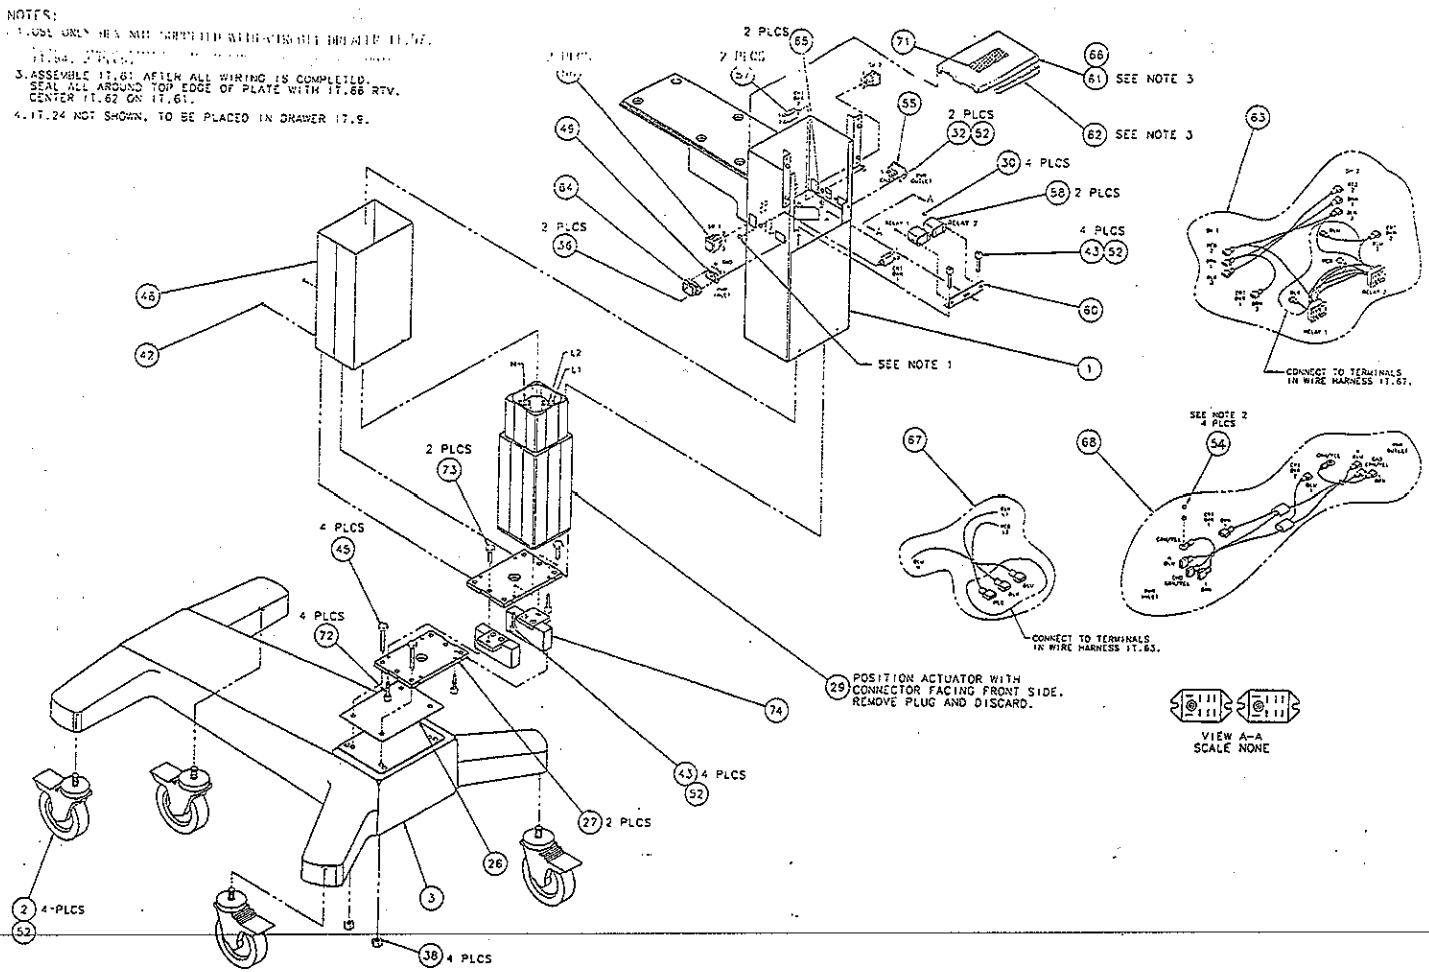
NOTES:
3. ASSEMBLE 17.61 AFTER ALL WIRING IS COMPLETED. SEAL ALL AROUND TOP EDGE OF PLATE WITH 17.88 RTV. CENTER 17.62 ON 17.61.
4. 17.24 NOT SHOWN. TO BE PLACED IN DRAWER 17.9.
SEE NOTE 1
SEE NOTE 3
SEE NOTE 3
SEE NOTE 2
4 PLCS
CONNECT TO TERMINALS IN WIRE HARNESS 17.67.
CONNECT TO TERMINALS IN WIRE HARNESS 17.63.
POSITION ACTUATOR WITH CONNECTOR FACING FRONT SIDE. REMOVE PLUG AND DISCARD.
VIEW A-A
SCALE NONE
2 PLCS
4 PLCS
4 PLCS
2 PLCS
4 PLCS
4 PLCS
2 PLCS
4 PLCS
4-PLCS

FIGURE 6.2C: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 240V VHA CART ASSEMBLY UK (SHEET 1 OF 2)

Change 2

(This Page Intentionally Left Blank)

Change 2

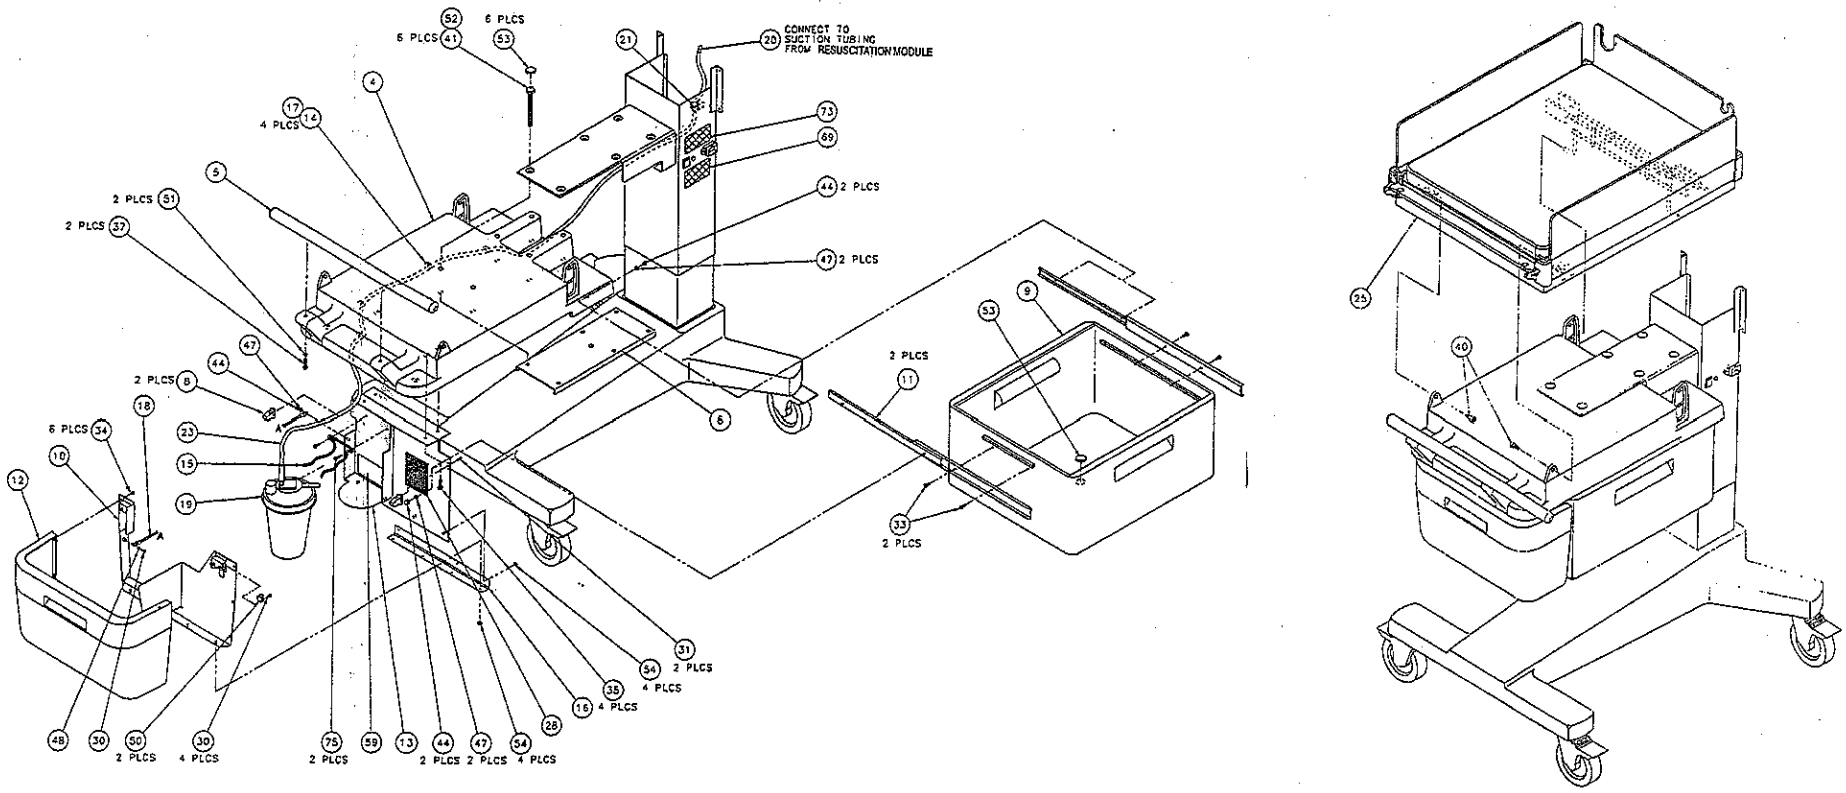

FIGURE 6.2C: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 240V VHA CART ASSEMBLY UK (SHEET 2 OF 2)

Change 2

TABLE 6.2C: RESUSCITAIRE® RADIANT WARMER, 240V VHA CART ASSEMBLY UK, PARTS LIST

(Sheet 1 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
1		OUTER LOWER COLUMN	82 010 03
2		SWIVEL CASTER 5.00, W/BRAKE, GRAY	81 005 07
3		BASE CASTING	81 020 01
4		SUPPORT FRAME	81 020 14
5		FRONT HANDLE	81 020 16
6		SUPPORT FRAME MOUNTING PLATE	81 010 13
7		SNAP-IN BUSHING, 0.41 ID 0.562 HOLE	82 101 09
8		LATCH BLOCK	81 020 17
9		PASS THRU DRAWER	81 020 08
10		RESUS COMPARTMENT REAR PLATE	81 020 24
11		PAS THRU DRAWER SLIDE	81 101 12
12		RESUS COMPARTMENT COVER	81 020 18
13		RESUS COMPT WELDMENT PLATE	81 020 19
14		CABLE CLAMP, SPR TY NLY	81 020 20
15		SUCTION BOTTLE HOLDER	81 000 03
16		RESUS COMPARTMENT HINGE	81 020 22
17		SELF TAPPING SCREW, 6 - 32 X 5/16	99 084 84
18		CORD WITH NYLON EYELETS	81 020 23
19		SUCTION BOTTLE 800 CC	81 001 15
20		NYLON NIPPLE 3/16 X 3/16 TUBE	81 000 13
21		PLASTIC CLIP SNAP, SLFADH	78 163 40
22		WHITE PLASTIC PLUG BUTTON, 0.88	17 AZ 608
23		SUCTION TUBING W/END .25ID 42.0" LG	82 010 10
24		SUCTION TUBING W/END .25ID 6' LG	81 001 16
25		BASSINET ASSEMBLY	81 100 81
26		BASE DRESS PLATE	82 010 00
27		DELETED	
28		SUCTION FLOW LABEL	81 101 23
29		220V ACTUATOR	83 400 21
30		SCREW, 4 - 40 X 1/4 TR PH SS NYLOK	99 010 67
31		SCREW, 8 - 32 X 3/8 FL PH SS 100D NYK	99 031 54
32		SCREW, 4 - 40 X 1/4, FL PH SS	99 010 62
33		SCREW, 8 - 32 X 3/8 TR PH SS NYLOK	99 031 52
34		SCREW, 6 - 32 X 1/4 PN PH S Z1 SEMSC	99 022 84
35		SCREW, 10 - 32 X 1/2 TR PH SS NYLOK	99 042 05
36		SCREW, 4 - 40 X 3/8 RD PH SS NYLOK	99 011 14

TABLE 6.2C: RESUSCITAIRE® RADIANT WARMER, 240V VHA CART ASSEMBLY UK, PARTS LIST

(Sheet 2 of 2)

ITEM NO.	REFERENCE DESIG.	DESCRIPTION	PART NUMBER
38		HEX NUT, 3/8 - 16 ES S Z1	99 111 25
39		NOT USED	
37		SCREW, 1/4 -20 X 5/8 CAP, BUTTON	99 056 66
40		SHOULDER SCREW,0.38D, 0.38L 5/18-18	99 195 22
41		SCREW, 3/8 - 16 X 3.50 CP HX SS	99 068 61
42		SCREW, 6 - 32 X 1/4 RD PH SS NYLOK	99 022 86
43		SCREW, M6 X 1.0 X 25 LG CP SK SS	99 998 76
44		ACORN NUT, 8 - 32 SS	99 106 21
45		SCREW, 3/8-16 X 4 CP HX S ZI GR5	99 068 70
46		INNER LOWER COLUMN UK	82 010 13
47		LOCK WASHER, INT #8 SS	99 122 92
48		FLAT WASHER, #10 SS (0.062 THK)	99 123 62
49		AC POWER CONNECTOR MALE10A, 250V	17 735 63
50		NYLATCH ROLLER CATCH	81 100 63
51		LOCK WASHER, INT 1/4 SS	99 125 54
52		LOCTITE #242	AR
53		NYLON PLUG BUTTON 0.88	78 161 20
54		HEX NUT, 8 - 32 KEPS S Z1	99 106 32
55		AC CONNECTOR FEMALE, 10A 250V	17 735 64
56		SWITCH, RKR, DPDT, 10A/250V	17 683 52
57		CIRCUIT BRKR, SP THERM, 3.0A 250/28V	17 BH 231
58		RELAY, SPDT, 10A 250V VDE	17 653 10
59		SUCTION JAR PLACEMENT LABEL	81 101 24
60		RELAY MOUNTING BRACKET	82 010 06
61		OUTER PLATE SEPARATOR, LWR COL	82 010 04
62		SEPARATOR PLATE GASKET	82 010 07
63		WIRE HARNESS	82 010 05
64		CORD LOCK ADAPTOR	17 734 12
65		GROUND LABEL	68 212 00
66		RTV DC732	AR
67		ACTUATOR WIRE HARNESS	82 010 11
68		PWR IN PWR OUT WIRE HARNESS	82 010 12
71		REPLACE COVER LABEL	82 010 14
72		SCREW. M6 X 1.0 X 60 LG CP SK SS	99 998 77
73		NOT USED	
74		ACTUATOR MOUNTING SPACER	82 010 30

Change 3

(This Page Intentionally Left Blank)

Change 2

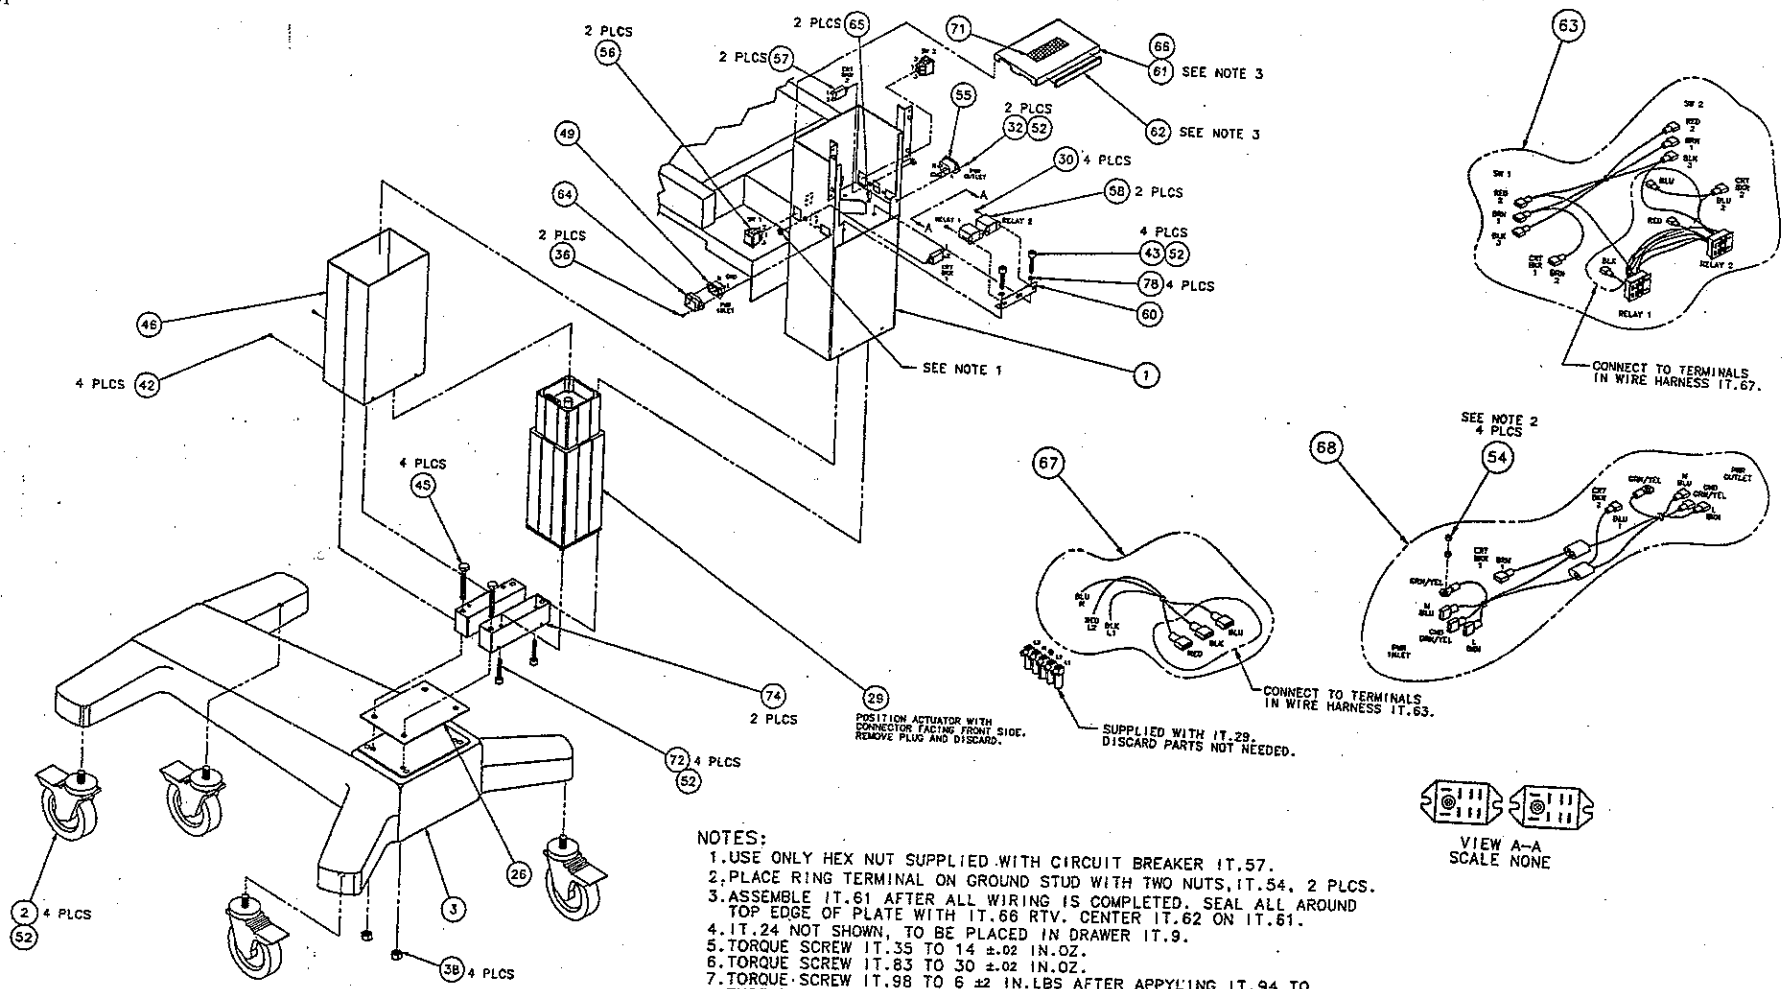

NOTES:
1. USE ONLY HEX NUT SUPPLIED WITH CIRCUIT BREAKER IT.57.
2. PLACE RING TERMINAL ON GROUND STUD WITH TWO NUTS, IT.54, 2 PLCS.
3. ASSEMBLE IT.61 AFTER ALL WIRING IS COMPLETED. SEAL ALL AROUND TOP EDGE OF PLATE WITH IT.66 RTV. CENTER IT.62 ON IT.61.
4. IT.24 NOT SHOWN, TO BE PLACED IN DRAWER IT.9.
5. TORQUE SCREW IT.35 TO 14 ±.02 IN.OZ.
6. TORQUE SCREW IT.83 TO 30 ±.02 IN.OZ.
7. TORQUE SCREW IT.98 TO 6 ±2 IN.LBS AFTER APPYLING IT.94 TO THREADS ENTERING IT.40 & IT.77, 4 PLCS.

FIGURE 6.2D: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 120V, 240V VARITILT BASSINET, VHA CART ASSEMBLY (SHEET 1 OF 3)

Change 5

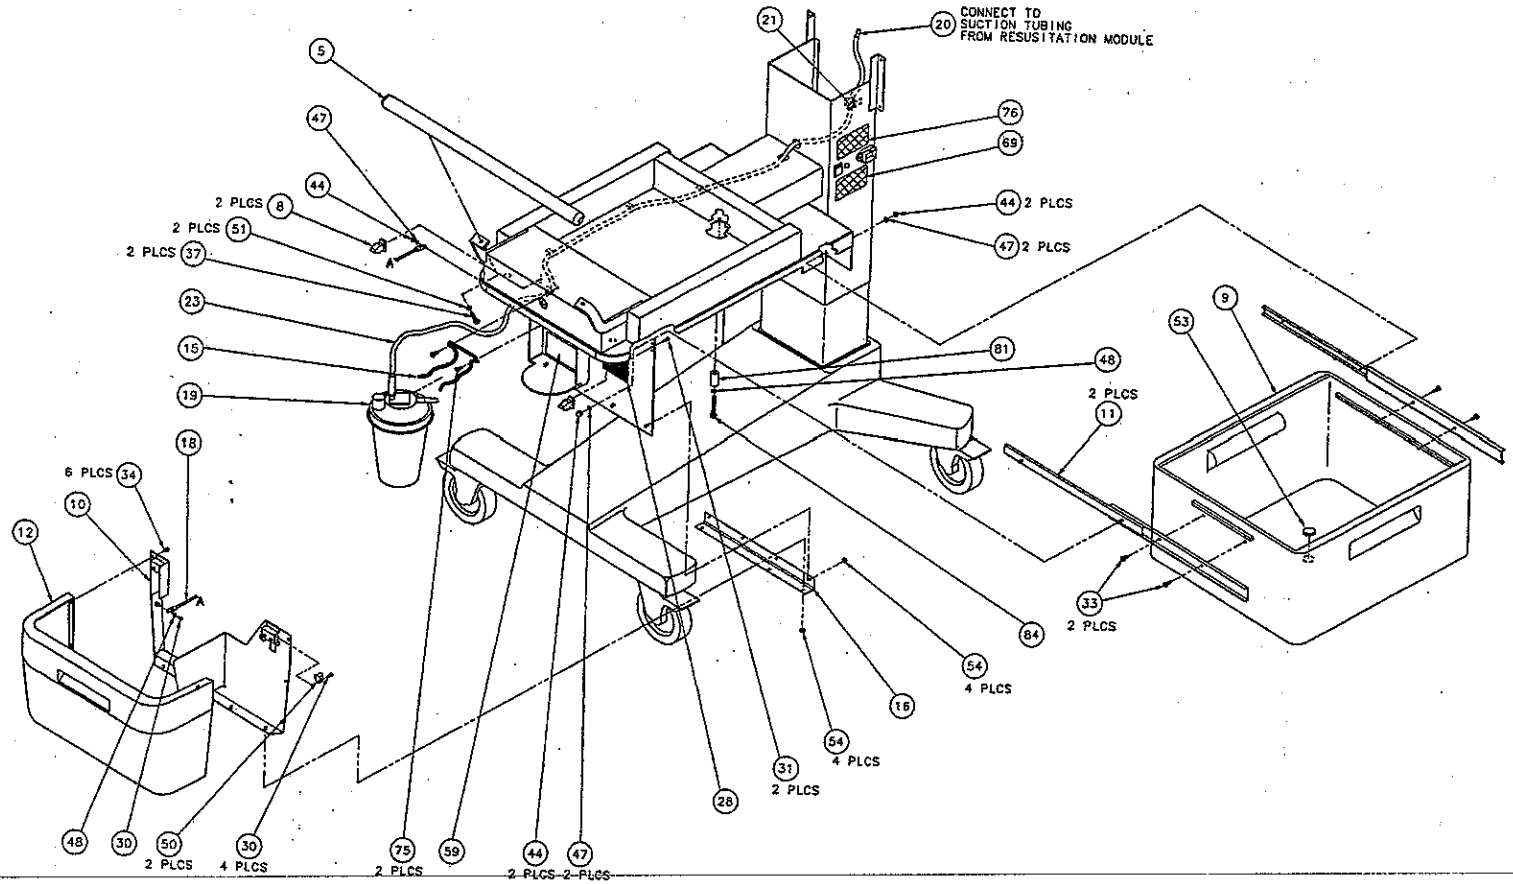

FIGURE 6.2D: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 120V, 240V VARITILT BASSINET, VHA CART ASSEMBLY (SHEET 2 OF 3)

Change 5

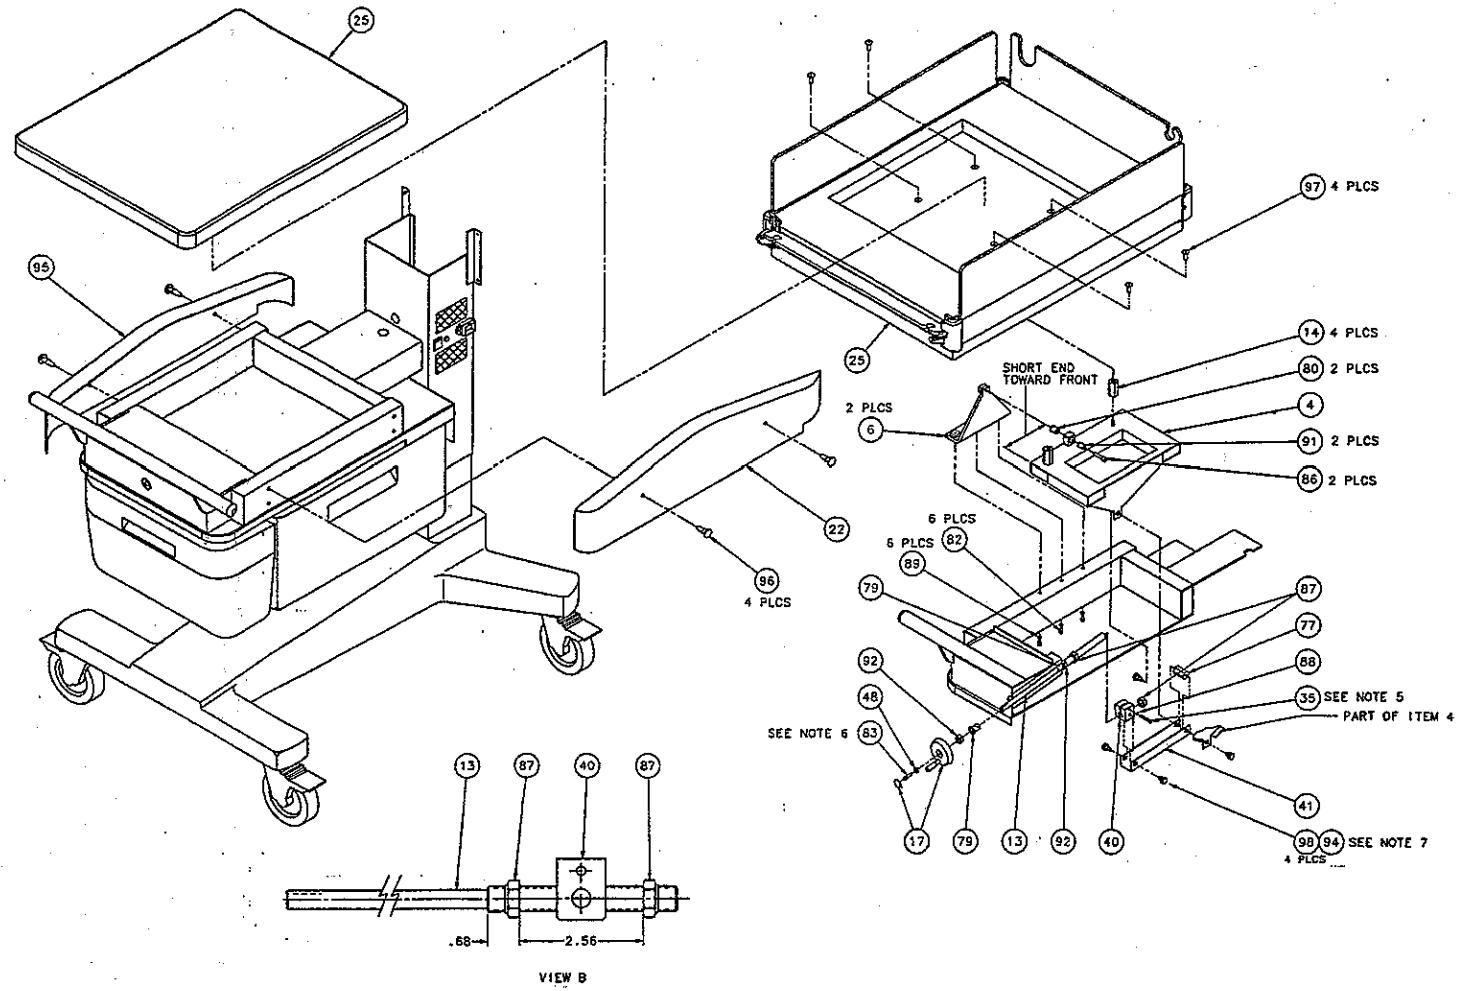

FIGURE 6.2D: PARTS LOCATION DIAGRAM, RESUSCITAIRE® RADIANT WARMER 120V, 240V VARITILT BASSINET, VHA CART ASSEMBLY (SHEET 3 OF 3)

Change 5